

ZAC5xPN0x

Ethernet Switches



PROFI[®]
NET

Operating instructions

Index

1. Proper Use	3
2. Safety Precautions	3
3. EC Declaration of Conformity	3
4. Technical Data	4
4.1. Connection table ZAC50PN0x	5
4.2. Connection table ZAC51PN01	6
4.3. Housing Dimensions	7
4.3.1 ZAC5xxN01	7
4.3.2 ZAC50xN02	7
4.4. Complementary Products	8
5. Application Notes	12
6. Mounting Instructions	12
7. Initial Operation	12
7.1. System Structure	13
7.2. Power Cable	13
7.3. Functional Earth	14
7.4. Industrial Ethernet Cable	14
7.5. Industrial Ethernet Cable with Power over Ethernet	15
7.6. Connecting Digital Sensors and Actuators	15
7.7. Diagnosis	16
7.7.1 LED Display PROFINET Device (ZAC50PN0x)	16
7.7.2 LED Display PROFINET Device (ZAC51PN01)	17
7.8. Operation on a Controller	19
7.8.1 Overview of the modules for PROFINET	19
7.8.2 Detailed description of the modules for PROFINET devices	20
7.8.3 Diagnostic alarms	22
8. Web-based Configuration	23
8.1. Call up the Administration Interface	23
8.2. Overview page	26
8.3. Device settings	27
8.4. Industrial Ethernet Ports Settings	29
8.5. Digital I/O Ports Settings	30
9. Maintenance Instructions	31
10. Proper Disposal	31

1. Proper Use

This wenglor product must be used in accordance with the following functional principle:

Switch

A Switch is an active network component which distributes data to the corresponding addressees within a network in a targeted fashion. wenglor switches are fitted optionally with additional Power over Ethernet technology. The power supply is integrated into existing network connection by means of Power over Ethernet. As an addition to Industrial Ethernet, there are several digital inputs and outputs directly on the switch that can be activated or evaluated via the network.

2. Safety Precautions

- This operating instruction is part of the product and must be kept during its entire service life.
- Read this operating instruction carefully before using the product.
- Installation, start-up and maintenance of this product has only to be carried out by trained personnel.
- Tampering with or modifying the product is not permissible.
- Protect the product against contamination during start-up.
- Not a safety component in accordance with the EU Machinery Directive.

3. EC Declaration of Conformity

The products are developed, constructed and manufactured according to the directive 2004/108/EC. The following international standards and specifications apply:

- **EN 55022:2006+A1:2007** Information technology equipment. Radio disturbance characteristics. Limits and methods of measurement
- **EN 61000-6-2:2005** Electromagnetic compatibility (EMC), Part 6-2: Generic standards. Immunity for industrial environments

Any additional standards which are applicable for the given application must be observed.



4. Technical Data

Order number	ZAC50PN01	ZAC50PN02	ZAC51PN01
Supply voltage	18...32 V DC	18...32 V DC	18...32 V DC
Max. Current Consumption Device *	0.3 A	0.25 A	0.3 A
Max. Current Consumption System **	2.2 A	2 A	0.3 A
max. PoE Capacity	30 W	25 W	–
Temperature range	–25...60 °C	–25...60 °C	–25...60 °C
Voltage drop switching outputs	< 2.5 V	< 2.5 V	< 2.5 V
Max. Switching current switching outputs	0.6 A	0.6 A	0.6 A
Max. total current of the digital I/O ports	1A	1A	1A
Digital I/O ports short-circuit protected	Yes	Yes	Yes
Digital I/O ports overload protected	Yes	Yes	Yes
Digital I/O ports reverse polarity protected	Yes	Yes	Yes
Number of digital I/O ports	2	2	2
Housing material	Aluminum	Aluminum	Aluminum
Protection class	IP67	IP67	IP67
Type of connection power	7/8", 5-pin	7/8", 5-pin	7/8", 5-pin
Type of Connection Industrial Ethernet Ports	M12×1, 4-pin, D-coding	M12×1, 4-pin, D-coding	M12×1, 4-pin, D-coding
Type of Connection PoE Ports	M12×1, 8-pin, type x	M12×1, 8-pin, type x	–
Type of Connection Digital I/O ports	M12×1, 4-pin, A-coding	M12×1, 4-pin, A-coding	M12×1, 4-pin, A-coding
Number of PoE ports	5	2	–
Number of Industrial Ethernet Ports	2	2	7
Number of Digital I/O ports	2	2	2
PoE Standard	IEEE802.3af	IEEE802.3af	–
PoE Classes	Class 0, 1, 2, 3	Class 0, 1, 2, 3	–
Baud Rate	10 Mbit/s / 100 Mbit/s	10 Mbit/s / 100 Mbit/s	10 Mbit/s / 100 Mbit/s
Transmission Mode	Full / Half Duplex	Full / Half Duplex	Full / Half Duplex
Webserver	Yes	Yes	Yes
Switch Mode	Store & Forward	Store & Forward	Store & Forward
Managed Switch	Yes	Yes	Yes
VLAN Prioritization	Yes	Yes	Yes
Default IP	192.168.100.1	192.168.100.1	192.168.100.1
Auto-Crossover	Yes	Yes	Yes
Auto-Negotiating	Yes	Yes	Yes
Auto-Polarity	Yes	Yes	Yes

* Maximum own power consumption of the product without additional loads

** Maximum own power consumption of the product with additional loads
Full assignment of all PoE ports (if available) without digital I/O ports

4.1. Connection table ZAC50PN0x

52

Socket 1 Suitable Plug: 50

Pin	Function	In/Out
1	TxD (+)	Out
2	TxD (–)	Out
3	RxD (+)	In
4	RxD (–)	In
5	PoE (+)	Out
6	PoE (+)	Out
7	PoE (–)	Out
8	PoE (–)	Out

Socket 2 Suitable Plug: 51


Pin	Function	In/Out
1	TxD (+)	Out
2	RxD (+)	In
3	TxD (–)	Out
4	RxD (–)	In

Socket 3 Suitable Plug: 2

Pin	Function	In/Out
1	+24 V DC	Out
2	I/O	
3	GND	Out
4	I/O	
5		

Socket 4 Suitable Plug: 77 78

Pin	Function
1	0 V DC
2	0 V DC
3	⏏
4	+24 V DC U _{System}
5	+24 V DC U _{Digital I/O / Sensor}

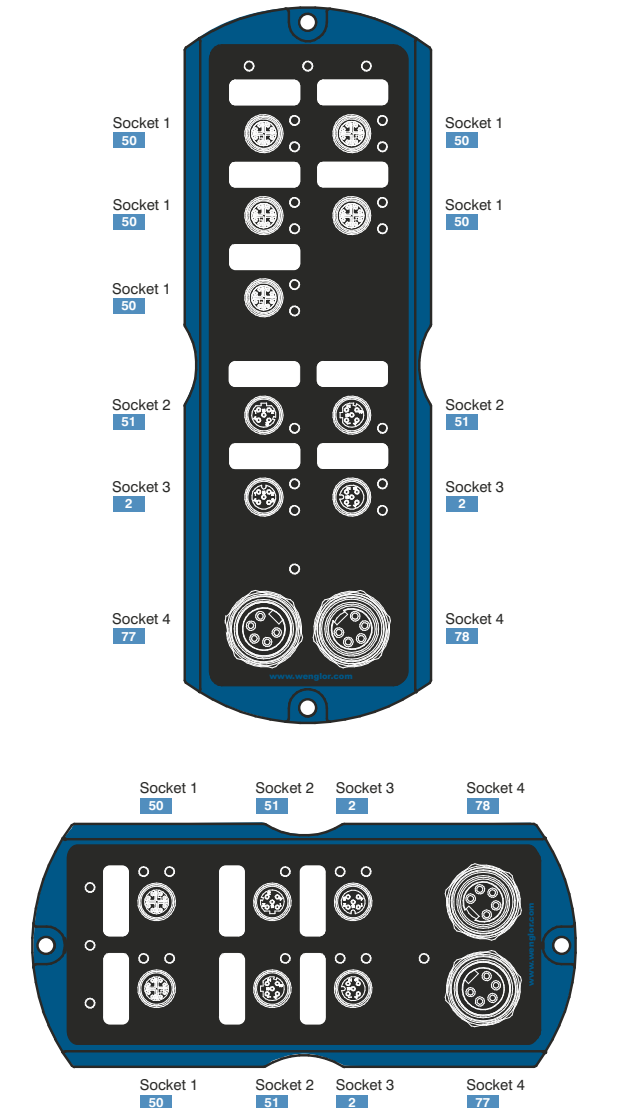

4.2. Connection table ZAC51PN01

Socket 1 Suitable Plug: 2


Pin	Function
1	+24 V DC
2	I/O
3	GND
4	I/O
5	

Socket 2 Suitable Plug: 51

Pin	Function	In/Out
1	TxD (+)	Out
2	RxD (+)	In
3	TxD (-)	Out
4	RxD (-)	In


Socket 3 Suitable Plug: 77 78

Pin	Function
1	0 V DC
2	0 V DC
3	
4	+24 V DC U _{system}
5	+24 V DC U _{Digital I/O / Sensor}

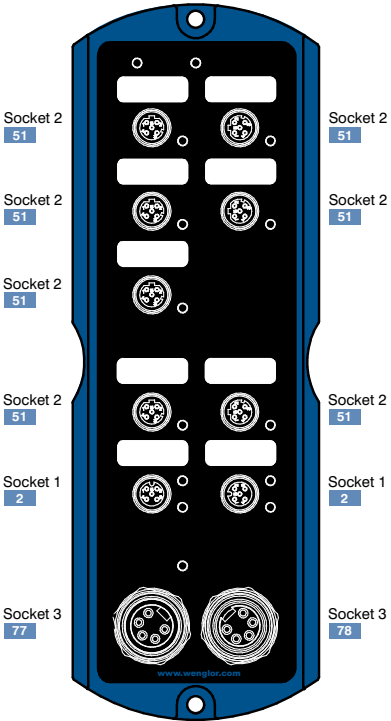


4.3. Housing Dimensions

4.3.1 ZAC5xxN01

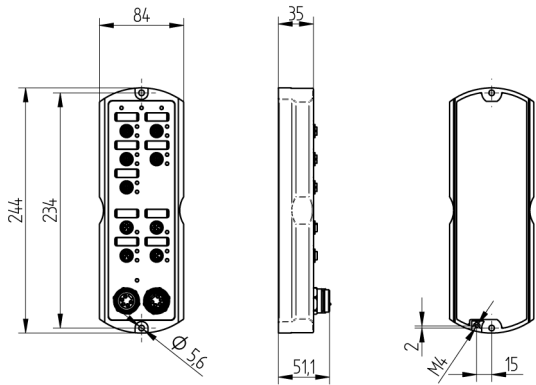


4.3.2 ZAC50xN02

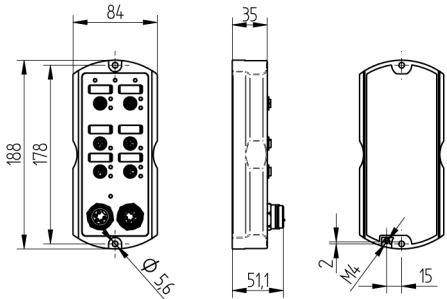

4.4. Complementary Products

Connection plug, 7/8", 5-pin

S82

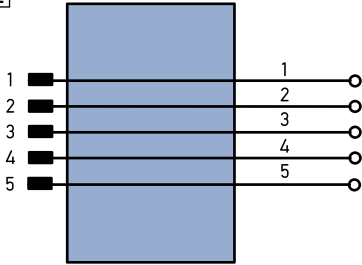


Order number: ZAT77NN01

Suitable Plug: 77

Connection socket, 7/8", 5-pin

S87

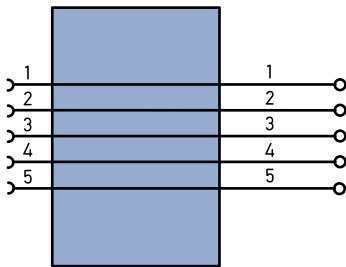


Order number: ZAB78NN01

Suitable Plug: 78

Connecting cable, 7/8", 5-pin

S76

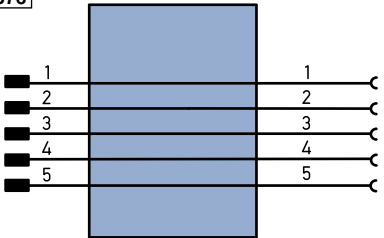

Order number: ZAV78R201, Cable length: 2 m

Suitable Plug: 78

Connecting line, 7/8", 5-pin

S75




Order number: ZAS78R601, Cable length: 10 m

Suitable Plug: 78

Connector Plug RJ45; 8-pin

S48

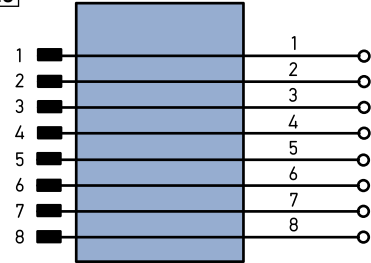


Order number: ZAT45NN01

Suitable Plug: 45

Connection plug, M12×1; 8-pin

S48

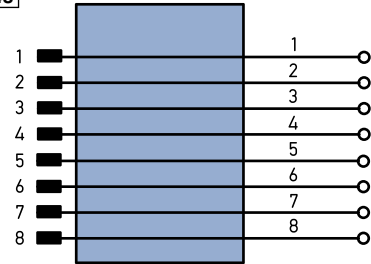


Order number: ZAT50NN01

Suitable Plug: 50

Connecting cable M12×1; 8-pin


S81

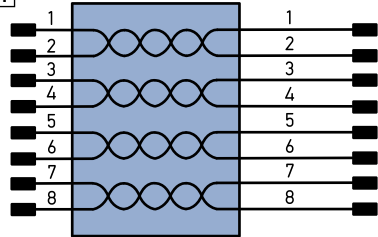

Order number: ZAV50R201, Cable length: 2 m
Order number: ZAV50R501, Cable length: 5 m

Suitable Plug: **50**

S85

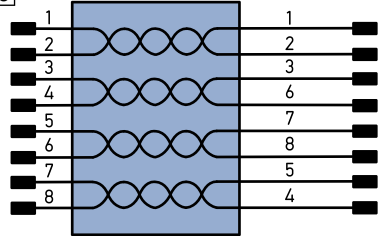


Order number: ZAV50R502, Cable length: 5 m

Suitable Plug: **50**

Connecting line M12×1; 8-pin

S85

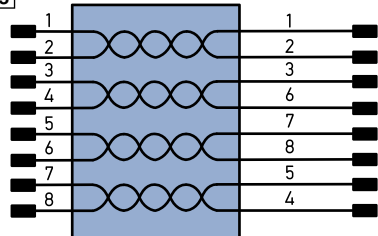


Order number: ZAS50R601, Cable length: 10 m

Suitable Plug: **50**

Connection plug, M12×1; 4-pin

S08

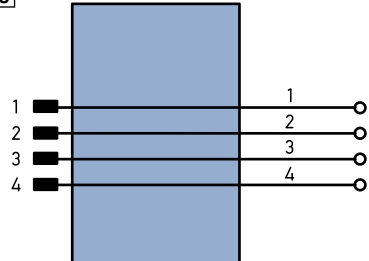


Order number: ZAT51NN01

Suitable Plug: **51**

Connecting cable M12×1; 4-pin; D-coding


S77

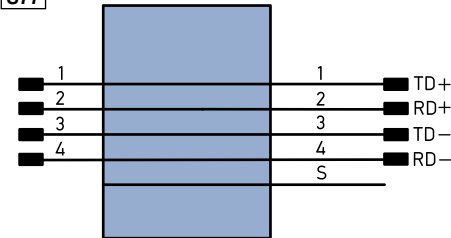

Order number: ZAV51R201, Cable length: 2 m
Order number: ZAV51R601, Cable length: 10 m

Suitable Plug: **51**

S79

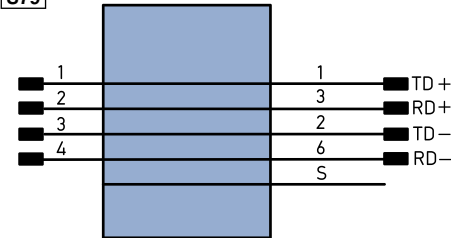

Order number: ZAV51R202, Cable length: 2 m
Order number: ZAV51R602, Cable length: 10 m

Suitable Plug: **51**

2 Connection and power supply cables
M12×1; 4-pin, different lengths are available for connecting the Sensor/actuator.

Legend

+	Supply Voltage +	nc	not connected	ENa	Encoder A
-	Supply Voltage 0 V	U	Test Input	ENb	Encoder B
~	Supply Voltage (AC Voltage)	U	Test Input inverted	AMIN	Digital output MIN
A	Switching Output (NO)	W	Trigger Input	AMAX	Digital output MAX
A	Switching Output (NC)	O	Analog Output	AOK	Digital output OK
V	Contamination/Error Output (NO)	O-	Ground for the Analog Output	SY In	Synchronization In
V	Contamination/Error Output (NC)	BZ	Block Discharge	SY OUT	Synchronization OUT
E	Input (analog or digital)	AWV	Valve Output	OUT	Brightness output
T	Teach Input	a	Valve Control Output +	M	Maintenance
Z	Time Delay (activation)	b	Valve Control Output 0 V	Wire Colors according to DIN IEC 757	
S	Shielding	SY	Synchronization		
RxD	Interface Receive Path	E+	Receiver-Line	BK	Black
TxD	Interface Send Path	S+	Emitter-Line	BN	Brown
RDY	Ready	≡	Grounding	RD	Red
GND	Ground	SnR	Switching Distance Reduction	OG	Orange
CL	Clock	Rx +/-	Ethernet Receive Path	YE	Yellow
E/A	Output/Input programmable	Tx +/-	Ethernet Send Path	GN	Green
IO-Link	IO-Link	Bus	Interfaces-Bus A(+)/B(-)	BU	Blue
PoE	Power over Ethernet	La	Emitted Light disengageable	VT	Violet
IN	Safety Input	Mag	Magnet activation	GY	Grey
QSSD	Safety Output	RES	Input confirmation	WH	White
Signal	Signal Output	EDM	Contact Monitoring	PK	Pink
				GNYE	Green Yellow

5. Application Notes

The Ethernet ports are fitted with overvoltage discharge protection. Internal varistors limit voltage surges to approx 70 V. The connecting cables of the digital I/O ports must not be longer than 30 m.

6. Mounting Instructions

When mounting and operating the switches, the corresponding electrical and mechanical regulations, standards and safety rules must be observed. The switch must be protected against mechanical influences. The product must be fastened in such a way that the mounting position cannot change. The switch is designed for use in the industrial sector. The industrial environment is characterized in that consumers are not connected directly to the public low-voltage mains network. Additional measures must be taken for use in the residential sector, business and commercial sectors. The table below defines the tightening torques of the plugs and fastening options for ensuring compliant and faultless operation.

Connection type	Tightening torque in (Nm)
M12	0.4
7/8" plug	1.5
FE ground strap	2.2±0.2
Switch Mounting	4.0±0.2


7. Initial Operation

Project planning, installation, start-up, maintenance and testing of the devices may only be carried out by qualified electrical technicians familiar with the safety standards of automation technology.

Only cables and accessories that meet the standards and requirements for safety, electromagnetic compatibility and, if necessary, telecommunications terminal equipment and the specifications. In case of damage, the product must not be used further on. In the event of improper use, the guarantee and liability claim against the manufacturer shall lapse.

Information concerning which cables and accessories are approved for installation can be found at www.wenglor.com or are described in this manual.

7.1. System Structure

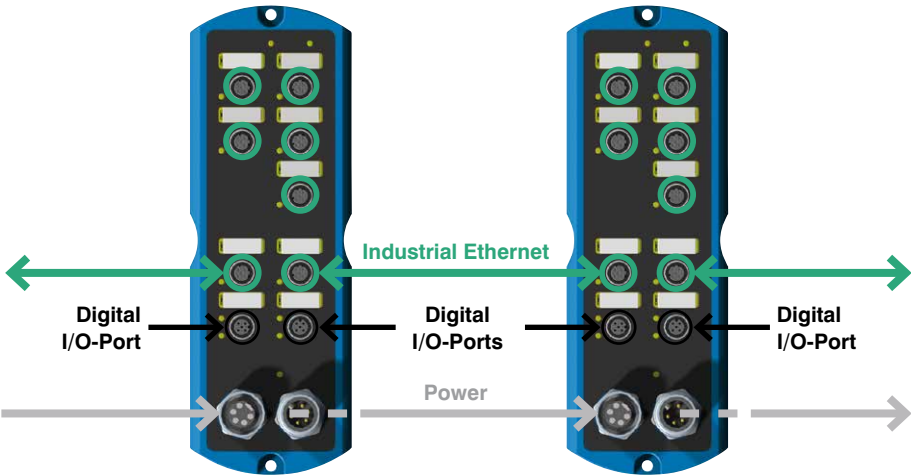

7.2. Power Cable



Power In			Power Out		
0 V	Pin 1		0 V	Pin 1	
0 V	Pin 2		0 V	Pin 2	
	Pin 3			Pin 3	
24 V max. 9 A	Pin 4	U_{System}	24 V max. 9 A	Pin 4	
24 V max. 9 A	Pin 5	$U_{Digital\ I/O\ / \ Sensor}$	24 V max. 9 A	Pin 5	

The 7/8" plug is designed for a maximum current of 9 A per pin. This must be taken into account when looping the supply voltage.

The switch must be connected to a power supply of 18 to 32 V DC. The $U_{System/Sensor}$ supplies the connection with voltage and the $U_{Digital\ I/O}$ provides the power supply of the digital I/O ports.

The voltage of the U_{System} must not be switched off during ongoing operation and hence must not be conducted via emergency stop circuits, since otherwise the switch and all connected Ethernet products will not be able to participate in the communication.

Measures must be taken in all cases to ensure that the supply voltage, measured at the remotest participant, does not fall short of the system supply voltage of 18 V DC.

To be complied with in reactive operation:
If the power supply of the digital I/O ports is merged with the voltage supply of the switch, there will then be the risk of a communication disruption in the event of a short-circuit on the I/O devices.


7.3. Functional Earth

The FE connection is on the lower front edge of the switch. To ensure proper functioning in accordance with the EMC regulations specified in the data sheet, we recommend using our ground strap, which is included in the scope of delivery (for tightening torque see “Mounting Instructions” on page 12).

7.4. Industrial Ethernet Cable

wenglor provides a variety of preassembled industrial Ethernet cables.
To ensure cabling as simple and reliable as possible, we recommend using our preassembled Industrial Ethernet cables.

Assignment of the Industrial Ethernet connection:

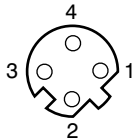


Pin	Function
1	TxD (+)
2	RxD (+)
3	TxD (-)
4	RxD (-)

7.5. Industrial Ethernet Cable with Power over Ethernet


To ensure cabling as simple and reliable as possible, we recommend using our preassembled industrial Ethernet cables. It is also possible to interconnect two switches with PoE via the 8-pin network cable. The PoE supply should then be switched off on at least one of the two PoE ports (see “Industrial Ethernet Ports Settings” on page 29).

Assignment of the Industrial Ethernet connection with PoE:

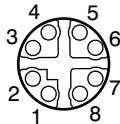

Pin	Function
1	TxD (+)
2	TxD (-)
3	RxD (+)
4	RxD (-)
5	PoE (+)
6	PoE (+)
7	PoE (-)
8	PoE (-)

 7.6. Connecting Digital Sensors and Actuators




Pin	Function
1	24 V
2	Freely programmable input/output
3	0 V
4	Freely programmable input/output

Sockets that are not used must be provided with caps, which are included in the scope of supply. Otherwise, the protection class IP67 cannot be guaranteed.

7.7. Diagnosis

Assignment example:

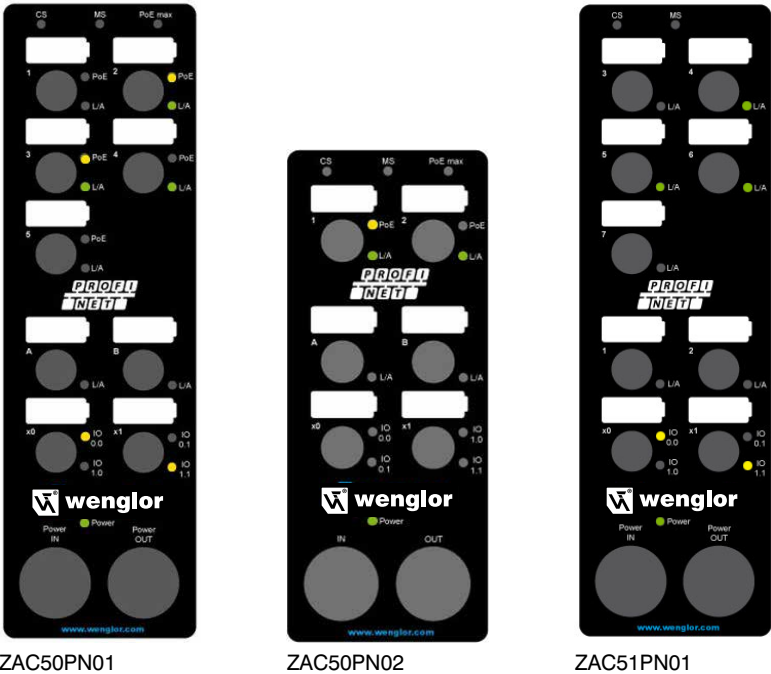

7.7.1 LED Display PROFINET Device (ZAC50PN0x)




The status displays for the communication are marked on the switch with CS and MS.

Designation	Condition	Function
CS (Communication Status)	Off	Connection (AR) with controller established
	Green	Protocol not initialized
	Red	No connection (AR) with controller established
MS (Module Status)	Off	Module Status OK
	Red	Device Error
	Red flashing	Detection function, switched on via Engineering Tool
PoE max	Red	Maximum PoE performance reached
	Red flashing	PoE performance monitoring was switched off

The LED display on the M12 sockets displays the diagnosis for the corresponding socket.



Designation	Condition	Function
PoE	Yellow	PoE in operation
	Yellow flashing	PoE function switched off
L/A	Green	Link exists
	Green flashing	Communication

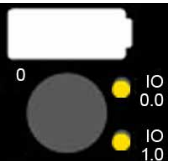

Designation	Condition	Function	
IO 0.0/IO 1.0	Yellow	Input	UB at Pin 2/4
		Output	Switching output at UB Pin 2/4
	Red	Output	Short circuit at Pin 2/4

7.7.2 LED Display PROFINET Device (ZAC51PN01)




The status displays for the communication are marked on the switch with CS and MS.

Designation	Condition	Function
CS (Communication Status)	Off	Connection (AR) with controller established
	Green	Protocol not initialized
	Red	No connection (AR) with controller established
MS (Module Status)	Off	Module Status OK
	Red	Device Error
	Red flashing	Detection function, switched on via Engineering Tool

The LED display on the M12 sockets displays the diagnosis for the corresponding socket.



Designation	Condition	Function
L/A	Green	Link exists
	Green flashing	Communication via port

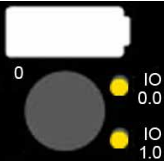

Designation	Condition	Function	
IO 0.0/IO 1.0	Yellow	Input	UB at Pin 2/4
		Output	Switching output at UB Pin 2/4
	Red	Output	Short circuit at Pin 2/4

7.8. Operation on a Controller

If you wish to start up the device on a controller, please carry out the following steps:

- Attach the switch to the supply voltage and connect this to the controller via one of the Ethernet ports. You can find the appropriate connection technology on the wenglor homepage.
- Install the associated device-specific electronic description file (e.g. GSDML file) in the Hardware Manager of the controller. You will find the required file ready for download at **www.wenglor.com → Product world → Product Search (Order Number) → Download → Product Description File** or in the download area at **Download → Product specification files → Product Search → Order Number**.
- The following procedure can be applied by way of example (example based on the Step 7 Engineering Tool of a Simatic-S7 controller from Siemens)
- Insert the device into the PROFINET cable
- Afterwards, call up the object properties of the device
- Assign a name of your choice to the device
- Allocate an Ethernet address to the device
- Assign the product by means of device names/IP address (detection via MAC address)
- Transfer address
- Transfer the configuration to the controller

A detailed description for different controllers and for the installation of the files or for the project planning of the network can be found in the help files of the relevant controller. wenglor offers an example quick guide on starting up a PROFINET device for the Simatic-S7 controller from Siemens and the appropriate software Step 7 Engineering Tool (**www.wenglor.com → Product world → Product Search (Order Number) → Download → General instructions**).

7.8.1 Overview of the modules for PROFINET

Name	Cyclical/input	Parameter slot
4 bit digital input/output	Digital input/output	1 (optional)

The following describes the detailed design of the modules.

7.8.2 Detailed description of the modules for PROFINET devices

DAP 1: ZAC50PN01 V1.0

Module ID: 0x00000303
Submodule: 0x00000000

Parameter:

Name	Data type	Byte offset	Bit offset	Bit length	Default value	Value range	Changeable	Index	Length
Web server Access	BitArea	0	0	1	0: Enabled		Yes	256	1 byte
Overload Protection	BitArea	0	0	1	0: Enabled		Yes	257	1 byte
PoE Functionality Port1	BitArea	0	0	1	1: Enabled		Yes	258	1 byte
PoE Functionality Port2	BitArea	0	1	1	1: Enabled		Yes	258	1 byte
PoE Functionality Port3	BitArea	0	2	1	1: Enabled		Yes	258	1 byte
PoE Functionality Port4	BitArea	0	3	1	1: Enabled		Yes	258	1 byte
PoE Functionality Port5	BitArea	0	4	1	1: Enabled		Yes	258	1 byte

DAP 2: ZAC50PN02 V1.0

Module ID: 0x00000302
Submodule: 0x00000000

Parameter:

Name	Data type	Byte offset	Bit offset	Bit length	Default value	Value range	Changeable	Index	Length
Web server Access	BitArea	0	0	1	0: Enabled		Yes	256	1 byte
Overload Protection	BitArea	0	0	1	0: Enabled		Yes	257	1 byte
PoE Functionality Port1	BitArea	0	0	1	1: Enabled		Yes	258	1 byte
PoE Functionality Port2	BitArea	0	1	1	1: Enabled		Yes	258	1 byte

DAP 4: ZAC51PN01 V1.0

Module ID: 0x00000303
Submodule: 0x00000000

Parameter:

Name	Data type	Byte offset	Bit offset	Bit length	Default value	Value range	Changeable	Index	Length
Web server Access	BitArea	0	0	1	0: Enabled		Yes	256	1 byte

DAP 1/DAP 2/DAP 4 use the module 1

Module 1: 4 bit digital in/out
Module ID: 0x00000001
Submodule: 0x00000001

Format cyclical input and output data

Example: x1P4 → Digital I/O Port 1, Pin 4

ZAC5xPN0x	Input & Output							
	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte 0	-	-	-	-	-	-	x1P2	x0P2
Byte 1	-	-	-	-	-	-	x1P4	x0P4

Parameter:

Name	Data type	Byte offset	Bit offset	Bit length	Default value
IO Configuration Port0, Pin2)	BitArea	0	0	1	0: Input
IO Configuration Port1, Pin2)	BitArea	0	1	1	0: Input
IO Configuration Port0, Pin4)	BitArea	1	0	1	0: Input
IO Configuration Port1, Pin4)	BitArea	1	1	1	0: Input

7.8.3 Diagnostic alarms

The appropriate alarm module should be set up in the controller in the case of an alarm message originating from the switch by short circuit at the ports (hardware interrupt OBs OB40-OB47). If this is not the case, the CPU goes into the STOP mode in the case of an interrupt triggering event. The following alarm messages are output from the switch to the controller:

Diagnostic I/O: Short-circuit after V_{CC} (coming)

Api	0x00000000
Slot	0x0001
Subslot	0x0001
Channel	1: (Port 2, Pin2) 2: (Port2, Pin4) 3: (Port4, Pin2) 4: (Port4, Pin4)
AlarmSpecifier	0x01, Diagnosis appears
ChannelErrorType	0x0100, (manufacturer-specific)

Diagnostic I/O: Short-circuit after V_{CC} (going)

Api	0x00000000
Slot	0x0001
Subslot	0x0001
Channel	1: (Port 2, Pin2) 2: (Port2, Pin4) 3: (Port4, Pin2) 4: (Port4, Pin4)
AlarmSpecifier	0x02, Diagnosis disappears
ChannelErrorType	0x0100, (manufacturer-specific)

Diagnostic I/O: Short-circuit after Gnd (coming)

Api	0x00000000
Slot	0x0001
Subslot	0x0001
Channel	1: (Port 2, Pin2) 2: (Port2, Pin4) 3: (Port4, Pin2) 4: (Port4, Pin4)
AlarmSpecifier	0x01, Diagnosis appears
ChannelErrorType	0x0101, (manufacturer-specific)

Diagnostic I/O: Short-circuit after Gnd (going)

Api	0x00000000
Slot	0x0001
Subslot	0x0001
Channel	1: (Port2, Pin2) 2: (Port2, Pin4) 3: (Port4, Pin2) 4: (Port4, Pin4)
AlarmSpecifier	0x02, Diagnosis disappears
ChannelErrorType	0x0101, (manufacturer-specific)

8. Web-based Configuration

The switch is equipped with a web-based setting interface, which works independently of the operating system. You can easily set parameters for the switch using a standard web browser. The network settings are preset to the IP address 192.168.100.1, subnet mask 255.255.255.0 and standard gateway 192.168.100.254. The preset values are always assumed in the instructions.

The web server allows control-independent monitoring or a test environment to be set up. It is not needed for normal operation on the controller.


Attention:

When using on a controller, settings changed through the website are overwritten by the controller.

8.1. Call up the Administration Interface

Start the web browser. Enter the IP address of the switch into the address line of your browser and press the ENTER key. The IP address of the switch is preset to 192.168.100.1. To ensure that the browser displays the current website settings, the website in question must always be refreshed automatically in case of change. This setting must be changed browser-specific and is demonstrated here by means of Internet Explorer as an example. Under **Extras → Internet Options → Browsing history → Settings** the selection should be set to **Every time I visit the webpage**. Otherwise, any changes to the homepage might be displayed incorrectly.



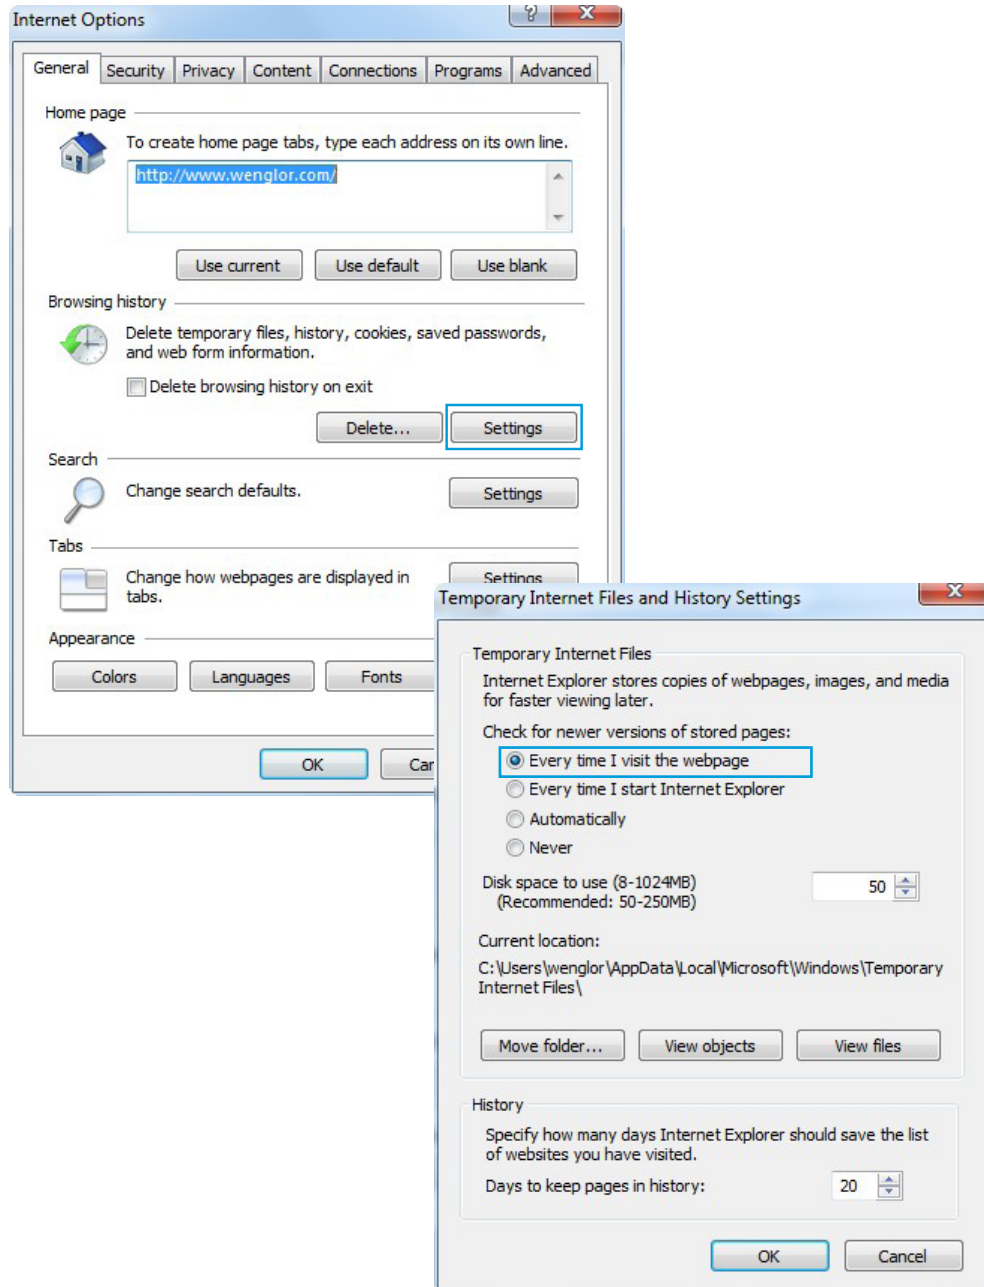

To now access the webpage of the switch (in the example ZAC50PN01), the IP address must be entered as described in the address line of the browser.

Example: `http://192.168.100.1` (delivery state)



The overview page **Device General** is not password-protected. If the pages of the device or port settings are accessed, a password prompt appears.

The following user data are preset in the delivery state:

User name: admin
Password: admin

The password can be changed on the page **Device Settings**.

8.2. Overview page

Part number	ZAC50PN01
Product version	V1.0.2
Producer	wenglor sensoric gmbh
Description	Switch PROFINET with PoE
Serial number	123456789
MAC adresse	54-4a-05-00-06-e7
Real Time Ethernet Status	offline
Unit Identifier	0x0101
Device name	Switch

After the connection is established, the overview page of the switch is displayed.

Through the language selection, the website can be changed from English (delivery state) to German, Italian, French or Spanish.

8.3. Device settings

Device settings

Network Settings:

☐ Get IP address automatically
☒ Use following IP addresses:

IP-Adresse: 192.168.100.2
 Subnet mask: 255.255.255.0
 Standard gateway: 192.168.100.1

Max. PoE Performance Switch: 30W
 PoE Performance currently: 4 W
 PoE Performance currently indicated: 2.438 W
 PoE Performance Supervision: ON

Password: [Change]
 Reset: [Reset]

Network settings:

Network Settings:

☐ Get IP address automatically
☒ Use following IP addresses:

IP-Adresse: 192.168.100.1
 Subnet mask: 255.255.255.0
 Standard gateway: 192.168.100.254

When a switch is not operated on a controller, it is possible to change the network settings. The network settings are saved by pressing the “Send” button. To make the changes of the network settings take effect, it is necessary to disconnect the switch briefly from the power supply.

WARNING: Error-free operation of the product can only be guaranteed if the correct network settings are entered in the web user interface. Any incorrect entry of the values could cause the device to be no longer accessible in the network. It must be ensured that supply power is not interrupted while making changes to network settings. Furthermore, supply power must maintained for at least an additional 5 minutes after the network settings have been saved to memory.

PoE information (ZAC50PN0x):

Max. PoE Performance Switch	30W 
PoE Performance currently	4 W
PoE Performance currently indicated	2.438 W
PoE Performance Supervision	ON 

The switch monitors the current PoE power consumption constantly. The webpage shows the maximum available PoE performance of the switch as well as the currently reserved and outgoing PoE performance. Every PoE device registers in a specific PoE performance class when starting. This performance is then reserved in the switch. Mostly, the maximum reserved performance is not demanded, however. It is possible to optimally utilize the maximum PoE performance of the switch by deactivating the PoE performance monitoring.

If the PoE performance monitoring is deactivated, this can cause performance impairments of the device. In this case, the maximum output PoE performance must not be more than the maximum PoE performance of the switch. If the performance monitoring is deactivated, this is displayed on the switch with a red flashing PoE max LED. During operation, the performance monitoring can be changed from inactive to active. Here, all PoE devices are restarted automatically in order to save the reserved performance of the individual ports.

Change password:

Change

An additional window opens, in which the new password can be entered.

Please note: If you forget the password, the switch can only be set to the delivery state via a reset on the controller.

Reset:

Reset

Reset

The following settings can be reset to the delivery state by pressing the “Reset” button.

- Parameter of the digital I/O ports: All digital I/O ports are switched to input
- Parameter PoE: PoE monitoring is switched to one and on all ports the PoE power supply is activated
- The password is reset to the delivery state (“admin”)

Please note: The network settings are not reset hereby! If you do not know the network settings, the device must be connected to a controller in order to reset the settings.

8.4. Industrial Ethernet Ports Settings

General device

Device settings

Industrial Ethernet Ports

Digital I/O Ports

Industrial Ethernet Ports

Port A

Port B


PoE Port 1

PoE Port 2

PoE Port 3

PoE Port 4

PoE Port 5

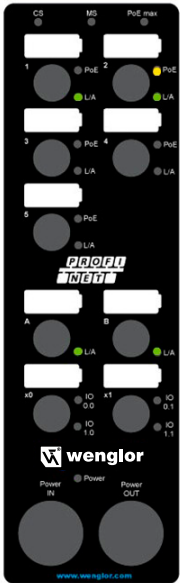

© wenglor sensoric gmbh | [Impressum](#)

The **Port Settings/Industrial Ethernet Ports** page provides an overview of the individual ports of the switch. You can switch between the individual ports using the tab on the uppermost level. The Industrial Ethernet ports contain information on the number of packages received correctly and incorrectly as well as packages sent correctly.

PoE Port 2 settings						
Port A	Port B	PoE Port 1	PoE Port 2	PoE Port 3	PoE Port 4	PoE Port 5
Number of error-free received packets		683				
Number of defective received packets		0				
Number of error-free sent packets		1608				
PoE in service		ON 				
Declared power		4Watt				
Performance currently displayed		2.625W				

In addition to the information on packages, it is possible to activate or deactivate the PoE power supply individually for each PoE port. On the webpage, the amount of PoE performance registered and actual outgoing performance is also documented for each PoE port.

8.5. Digital I/O Ports Settings

The switch has 2 ports available with two digital inputs/outputs each. The digital inputs/outputs are configured on the **Digital I/O Ports** page.

General device

Device settings

Industrial Ethernet Ports

Digital I/O Ports

Port x0 Settings

Port x0

Port x1

Configuration Pin2:

IN

Configuration Pin4:

IN

Switching Status Pin2:

0V

Switching Status Pin4:

0V

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520

521

522

523

524

525

526

527

528

529

530

531

532

533

534

535

536

537

538

539

540

541

542

543

544

545

546

547

548

549

550

551

552

553

554

555

556

557

558

559

560

561

562

563

564

565

566

567

568

569

570

571

572

573

574

575

576

577

578

579

580

581

582

583

584

585

586

587

588

589

590

591

592

593

594

595

596

597

598

599

600

601

602

603

604

605

606

607

608

609

610

611

612

613

614

615

616

617

618

619

620

621

622

623

624

625

626

627

628

629

630

631

632

633

634

635

636

637

638

639

640

641

642

643

644

645

646

647

648

649

650

651

652

653

654

655

656

657

658

659

660

661

662

663

664

665

666

667

668

669

670

671

672

673

674

675

676

677

678

679

680

681

682

683

684

685

686

687

688

689

690

691

692

693

694

695

696

697

698

699

700

701

702

703

704

705

706

707

708

709

710

711

712

713

714

715

716

717

718

719

720

721

722

723

724

725

726

727

728

729

730

731

732

733

734

735

736

737

738

739

740

741

742

743

744

745

746

747

748

749

750

751

752

753

754

755

756

757

758

759

760

761

762

763

764

765

766

767

768

769

770

771

772

773

774

775

776

777

778

779

780

781

782

783

784

785

786

787

788

789

790

791

792

793

794

795

796

797

798

799

800

801

802

803

804

805

806

807

808

809

810

811

812

813

814

815

816

817

818

819

820

821

822

823

824

825

826

827

828

829

830

831

832

833

834

835

836

837

838

839

840

841

842

843

844

845

846

847

848

849

850

851

852

853

854

855

856

857

858

859

860

861

862

863

864

865

866

867

868

869

870

871

872

873

874

875

876

877

878

879

880

881

882

883

884

885

886

887

888

889

890

891

892

893

894

895

896

897

898

899

900

901

902

903

904

905

906

907

908

909

910

911

912

913

914

915

916

917

918

919

920

921

922

923

924

925

926

927

928

929

930

931

932

933

934

935

936

937

938

939

940

941

942

943

944

945

946

947

948

949

950

951

952

953

954

955

956

957

958

959

960

961

962

963

964

965

966

967

968

969

970

971

972

973

974

975

976

977

978

979

980

981

982

983

984

985

986

987

988

989

990

991

992

993

994

995

996

997

998

999

CS

MS

PoE max

1

PoE

2

PoE

3

PoE

4

PoE

5

PoE

6

PoE

7

PoE

8

PoE

9

PoE

10

PoE

11

PoE

12

PoE

13

PoE

14

PoE

15

PoE

16

PoE

17

PoE

18

PoE

19

PoE

20

PoE

21

PoE

22

PoE

23

PoE

24

PoE

25

PoE

26

PoE

27

PoE

28

PoE

29

PoE

30

PoE

31

PoE

32

PoE

33

PoE

34

PoE

35

PoE

36

PoE

37

PoE

38

PoE

39

PoE

40

PoE

41

PoE

42

PoE

43

PoE

44

PoE

45

PoE

46

PoE

47

PoE

48

PoE

49

PoE

50

PoE

51

PoE

52

PoE

53

PoE

54

PoE

55

PoE

56

PoE

57

PoE

58

PoE

59

PoE

60

PoE

61

PoE

62

PoE

63

PoE

64

PoE

65

PoE

66

PoE

67

PoE

68

PoE

69

PoE

70

PoE

71

PoE

72

PoE

73

PoE

74

PoE

75

PoE

76

PoE

77

PoE

78

PoE

79

PoE

80

PoE

81

PoE

82

PoE

83

PoE

84

PoE

85

PoE

86

PoE

87

PoE

88

PoE

89

PoE

90

PoE

91

PoE

92

PoE

93

PoE

94

PoE

95

PoE

96

PoE

97

PoE

98

PoE

99

PoE

100

PoE

101

PoE

102

PoE

103

PoE

104

PoE

105

PoE

106

PoE

107

PoE

108

PoE

109

PoE

110

PoE

111

PoE

112

PoE

113

PoE

114

PoE

115

PoE

116

PoE

117

PoE

118

PoE

119

PoE

120

PoE

121

PoE

122

PoE

123

PoE

124

PoE

125

PoE

126

PoE

127

PoE

128

PoE

129

PoE

130

PoE

131

PoE

132

PoE

133

PoE

134

PoE

135

PoE

136

PoE

137

PoE

138

PoE

139

PoE

140

PoE

141

PoE

142

PoE

143

PoE

144

PoE

145

PoE

146

PoE

147

PoE

148

PoE

149

PoE

150

PoE

151

PoE

152

PoE

153

PoE

154

PoE

155

PoE

156

PoE

157

PoE

158

PoE

159

PoE

160

PoE

161

PoE

162

PoE

163

PoE

164

PoE

165

PoE

166

PoE

167

PoE

168

PoE

169

PoE

170

PoE

171

PoE

172

PoE

173

PoE

174

PoE

175

PoE

176

PoE

177

PoE

178

PoE

179

PoE

180

PoE

181

PoE

182

PoE

183

PoE

184

PoE

185

PoE

186

PoE

187

PoE

188

PoE

189

PoE

190

PoE

191

PoE

192

PoE

193

PoE

194

PoE

195

PoE

196

PoE

197

PoE

198

PoE

199

PoE

200

PoE

201

PoE

202

PoE

203

PoE

204

PoE

205

PoE

206

PoE

207

PoE

208

PoE

209

PoE

210

PoE

211

PoE

212

PoE

213

PoE

214

PoE

215

PoE

216

PoE

217

PoE

218

PoE

219

PoE

220

PoE

221

PoE

222

PoE

223

PoE

224

PoE

225

PoE

226

PoE

227

PoE

228

PoE

229

PoE

230

PoE

231

PoE

232

PoE

233

PoE

234

PoE

235

PoE

236

PoE

237

PoE

238

PoE

239

PoE

240

PoE

241

PoE

242

PoE

243

PoE

244

PoE

245

PoE

246

PoE

247

PoE

248

PoE

249

PoE

250

PoE

251

PoE

252

PoE

253

PoE

254

PoE

255

PoE

256

PoE

257

PoE

258

PoE

259

PoE

260

PoE

261

PoE

262

PoE

263

PoE

264

PoE

265

PoE

266

PoE

267

PoE

268

PoE

269

PoE

270

PoE

271

PoE

272

PoE

273

PoE

274

PoE

275

PoE

276

PoE

277

PoE

278

PoE

279

PoE

280

PoE

281

PoE

282

PoE

<

The wenglor sensoric GmbH hereafter called wenglor for short, points out that notes and information in this operating manual may be subject to constant development and technical changes and are therefore only published under reservation.

This operating manual does not represent a promise by wenglor with regard to the described processes or specific product characteristics. wenglor does not assume liability for printing errors or textual errors. wenglor shall only assume liability if it can be proved that wenglor had knowledge about for the errors in question at the time of creating the operating manual. This operating manual is only a general description of technical processes whose implementation does not apply to every individual application. If you have specific questions regarding this, you can always contact our technical support.

The information in this operating manual can be changed without advance announcement. No part of this document or extracts from it may be copied, reproduced or translated into another language without the prior written permission of wenglor sensoric GmbH.