



Information for Operating Instruction

Connection Diagrams for pressure sensors with two switching outputs

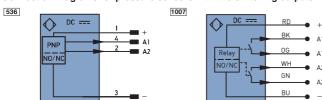

Operating structure for pressure sensors with two switching outputs

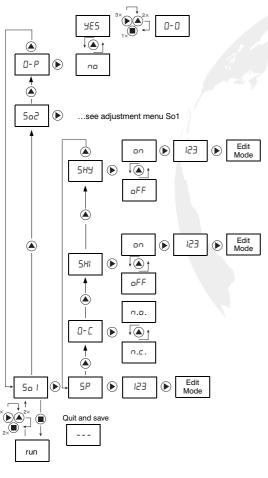


- - Changes selected digit position
 - Quit Edit mode

☐-P Offset suppression, this function can be used to correct offset deviations < 2 %

5o2 Menu level for switching output 2 Factory settings: 5P = 60 % of measuring range 5HJ = oFF, (on = 58 % of measuring range) 5HJ = oFF, (on = 85 % of measuring range) 0 - C = n.o.

5H¹ Switching output hysteresis, configurable switchback point between 2 % and 5P setting of the measuring range.

If 5H¹ = on, 5H¹ cannot be activated.
Factory setting: oFF, (on = 48 % of measuring range)

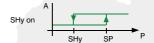

5HI Switching output window, configurable lower window limit. Between 2 % and 5P setting of the measuring range.

If 5HI = on, 5HY cannot be activated.
Factory setting: oFF, (on = 75 % of measuring range)



- 5P Switching point Factory setting: 50 % of measuring range
- 5a | Menu level for switching output 1

Display the applied pressure

Explanation of the Switching Status Indicator

OFF no switch active
Red Switch A1 active
Green Switch A2 active
Orange Switch A1 and A2 active