
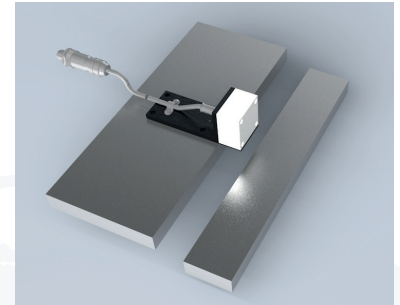
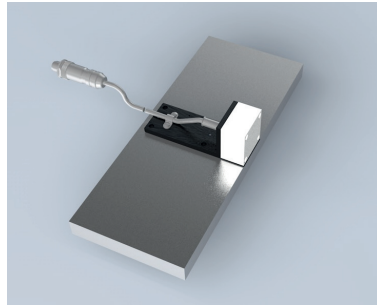


Information for Operating Instructions




INTT0xx, INTT1xx

Typical Installation Situations:

INTT0xx:

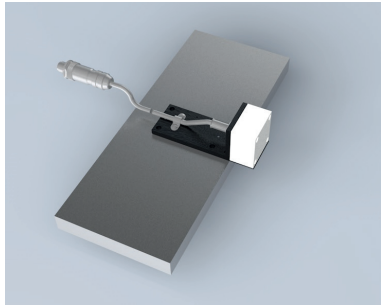

INTT1xx:

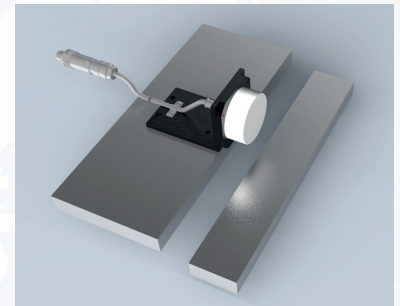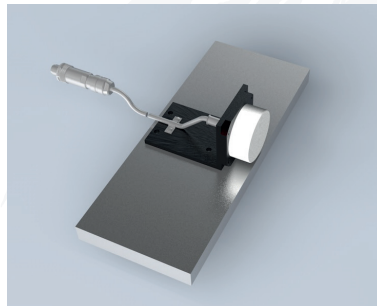
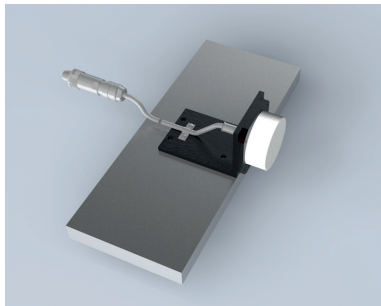


Installation correct

Installation **NOT** correct

Installation **NOT** correct

Minimum distances INTT0xx:

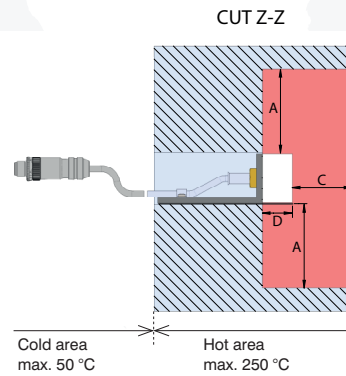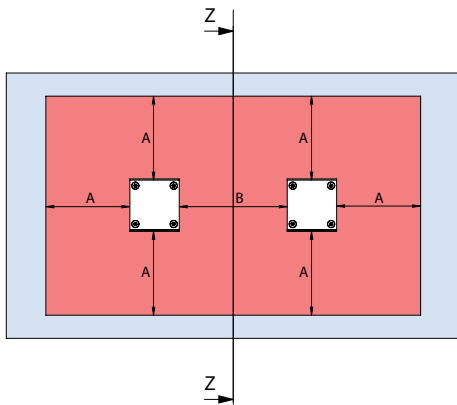

Legend:

A = 50 mm

B = 90 mm



C = 50 mm

D = 25 mm

without illustration:

Sensor to Sensor: 100 mm

Minimum distances INTT1xx:

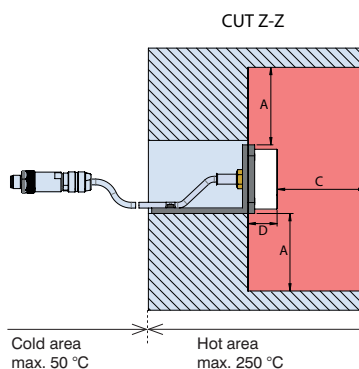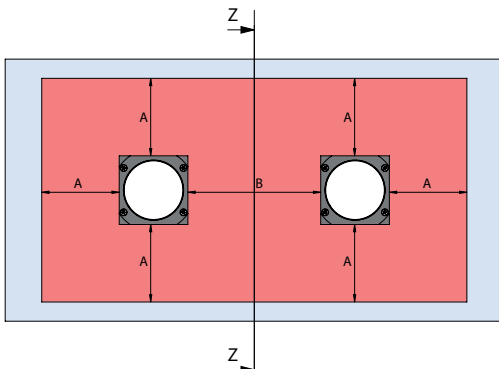

Legend:

A = 70 mm

B = 120 mm

C = 80 mm

D = 25 mm

without illustration:

Sensor to Sensor: 160 mm

Specifications are subject to change without notice

Status: 18.06.2018

SAP: 90800