wenglor
the innovative family

Operating Instructions

P1PH902

Reflex Sensor with Background Suppression



EN

Translation of the original operating instructions
Subject to change without notice
Available as PDF file only
Version 1.1
www.wenglor.com

Table of Contents

1 General 3

1.1 Information Concerning these Instructions 3

1.2 Explanation of Symbols 3

1.3 Limitation of Liability 4

1.4 Copyrights 4

2 For Your Safety 5

2.1 Use for Intended Purpose 5

2.2 Use for Other than the Intended Purpose 5

2.3 Personnel Qualifications 5

2.4 Modification of Products 6

2.5 General Safety Precautions 6

2.6 Approvals and protection classes 6

3 Technical Data 7

3.1 General data 7

3.1.1 Light spot diameter 8

3.1.2 Range 8

3.2 Housing Dimensions 8

3.3 Control panel 9

3.4 Complementary Products 9

3.5 Scope of delivery 9

4 Transport and Storage 10

4.1 Transport 10

4.2 Storage 10

5 Installation and Electrical Connection 11

5.1 Installation 11

5.2 Adjustment 11

5.3 Electrical Connection 13

5.4 Diagnosis 13

5.5 Troubleshooting 14

6 Settings 15

6.1 Adjustment via Potentiometer 15

6.2 Setting via IO-Link and wTeach2 15

7 Maintenance Instructions 16

8 Proper Disposal 17

9 Declarations of Conformity 18

1 General

1.1 Information Concerning these Instructions

- These instructions make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- Local accident prevention regulations and national work safety regulations must be complied with as well.
- The product is subject to further technical development, and thus the information contained in these operating instructions may also be subject to change. The current version can be found at www.wenglor.com in the product's separate download area.



INFORMATION

The operating instructions must be read carefully before using the product and must be kept on hand for later reference.

1.2 Explanation of Symbols

- Safety precautions and warnings are emphasized by means of symbols and signal words.
- Safe use of the product is only possible if these safety precautions and warnings are adhered to.

The safety precautions and warnings are laid out in accordance with the following principle:

SIGNAL WORD

Type and source of danger!

Possible consequences in the event that the hazard is disregarded.

→ Measures for averting the hazard.

The meanings of the signal words, as well as the scope of the associated hazards, are listed below:



⚠ DANGER

This signal word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.



⚠ WARNING

This signal word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.



⚠ CAUTION

This signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



NOTICE

This signal word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.



INFORMATION

Information draws attention to useful tips and suggestions, as well as information on efficient, error-free use.

1.3 Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art technology, as well as applicable standards and guidelines. Subject to change without notice.
- A valid declaration of conformity can be accessed at www.wenglor.com in the product's separate download area.
- wenglor sensoric elektronische Geräte GmbH (hereinafter referred to as "wenglor") excludes all liability in the event of:
  - Non-compliance with the instructions
  - Use of the product for purposes other than those intended.
  - Use by untrained personnel.
  - Use of unapproved spare parts.
  - Unapproved modification of products.
- These operating instructions do not include any guarantees from wenglor with regard to the described procedures or specific product characteristics.
- wenglor assumes no liability for printing errors or other inaccuracies contained in these operating instructions unless wenglor was verifiably aware of such errors at the point in time at which the operating instructions were prepared.

1.4 Copyrights

- The contents of these instructions are protected by copyright law.
- All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.

2 For Your Safety

2.1 Use for Intended Purpose

Reflex Sensors with Background Suppression

The reflex sensor with background suppression works with red light according to the time-of-flight measurement principle and is suitable for detecting objects against any background.

The sensor always has the same switching distance, regardless of the color, shape, or surface of the objects. The dynamic adjustment of the transmitted light brightness enables reliable switching with varying object and background properties. The sensor is suitable for presence checks with a large detection range, even under adverse ambient conditions, such as in the presence of ambient light or contamination. The IO-Link interface can be used to configure the reflex sensors (NC/NO, switching distance), as well as to output switching statuses.

This Product Can Be Used in the Following Industry Sectors:

- Special-purpose mechanical engineering
- Heavy mechanical engineering
- Logistics
- Automotive industry
- Food industry
- Packaging industry
- Pharmaceuticals industry
- Plastics industry
- Woodworking industry
- Consumer goods industry
- Paper industry
- Electronics industry
- Glass industry
- Steel industry
- Aviation industry
- Chemicals industry
- Alternative energies
- Raw materials extraction

2.2 Use for Other than the Intended Purpose

- Not a safety component in accordance with 2006/42/EC (Machinery Directive).
- The product is not suitable for use in potentially explosive atmospheres.
- The product may be used only with accessories supplied or approved by wenglor, or in combination with approved products. A list of approved accessories and combination products can be found at www.wenglor.com on the product detail page.



⚠ DANGER

Risk of personal injury or property damage in case of use for other than the intended purpose!

Use for other than the intended purpose may lead to hazardous situations.

→ Observe instructions regarding use for intended purpose.

2.3 Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel who use the product must have (permanent) access to the operating instructions.

⚠ DANGER

Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!

Personal injury and damage to equipment may occur.

→ Adequate training and qualification of personnel

2.4 Modification of Products

⚠ DANGER

Risk of personal injury or property damage if the product is modified!

Personal injury and damage to equipment may occur. Noncompliance may result in loss of the CE and/or UKCA mark and voiding of the warranty.

→ Modification of the product is not permitted

2.5 General Safety Precautions

INFORMATION

These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.

In the event of possible changes, the current version of the operating instructions can be found at www.wenglor.com in the product's separate download area.

Read the operating instructions carefully before using the product.

Protect the sensor against contamination and mechanical influences.

2.6 Approvals and protection classes

3 Technical Data

3.1 General data

	P1PH902
Optical Data	
Range	2500 mm
Setting Range	200...2500 mm
Switching Hysteresis	< 5 %
Light Source	Red Light
Service Life (T = +25 °C)	100000 h
Max. Ambient Light	40000 Lux
Electrical Data	
Supply Voltage	10...30 V DC
Supply Voltage with IO-Link	18...30 V DC
Current Consumption (Ub = 24 V)	< 25 mA
Switching Frequency	200 Hz
Switching Frequency (interference-free mode)	40 Hz
Response Time	2.5 ms
Response time (interference-free mode)	13 ms
Temperature Drift	< 10 %
Temperature Range	-40...60 °C
Switching Output Voltage Drop	< 2 V
Switching Output/Switching Current	100 mA
Short Circuit Protection	yes
Reverse Polarity Protection	yes
Overload Protection	yes
Lockable	yes
Interface	IO-Link V1.1
Protection Class	III
Mechanical Data	
Setting Method	Potentiometer
Housing Material	Plastic, ABS/PC
Degree of Protection	IP67 IP68
Connection	M12 × 1; 4-pin
Optic Cover	Plastic, PMMA
Safety-relevant Data	
MTTFd (EN ISO 13849-1)	1119.45 a
Output functions	
Output	NPN
Circuit	NC+NO
Adjustable parameters	
Output	NPN
Circuit	NC NO inactive Error output NC+NO

	P1PH902
Other parameters	Off-delay On-delay Mode of operation Hysteresis Switching point Emitted light

3.1.1 Light spot diameter


Detection Range	250 mm	1200 mm	2500 mm
Light Spot Diameter	20 mm	35 mm	70 mm

3.1.2 Range

Typical maximum switching distance deviation dSr = ± 0,06 m

White 90% remission	2,50 m
Gray 18 % remission	2,00 m
Black 6 % remission	1,20 m

3.2 Housing Dimensions

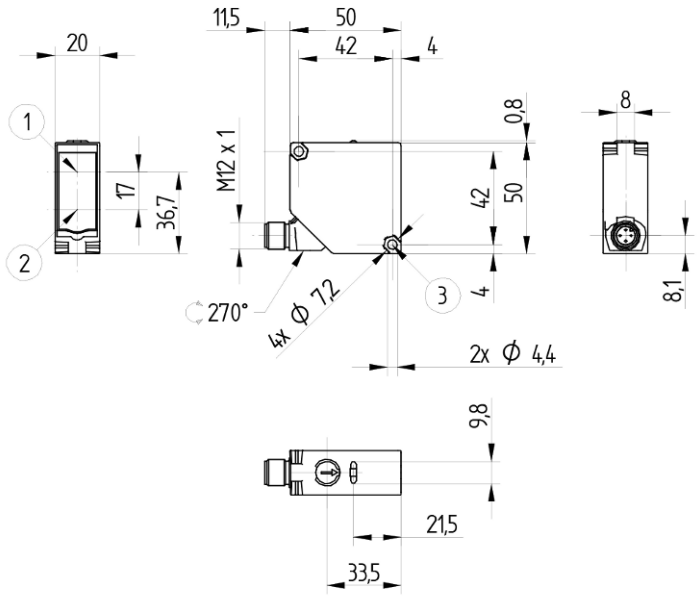


(1) Transmitter Diode
(2) Receiver Diode
(3) Wrench Size 7
Screw M4 = 0.5 Nm

Dimensions in mm (1 mm = 0,03937 Inch)

3.3 Control panel

A61



05 = Switching Distance Adjuster
68 = Power LED
5a = Switching Status Indicator, A1

3.4 Complementary Products

wenglor offers you the right connection and mounting technology as well as other accessories for your product. You can find this at www.wenglor.com on the product details page at the bottom.

3.5 Scope of delivery

- Sensor
- Safety precaution
- BEF-SET-14 screws
- Z1PE002 spacer sleeves

4 Transport and Storage

4.1 Transport

Upon receipt of shipment, the goods must be inspected for damage in transit. In the case of damage, conditionally accept the package and notify the manufacturer of the damage. Then return the device, making reference to damage in transit.

4.2 Storage

The following points must be taken into consideration with regard to storage:

- Do not store the product outdoors.
- Store the product in a dry, dust-free place.
- Protect the product against mechanical impacts.
- Protect the product against exposure to direct sunlight.



NOTICE

Risk of property damage in case of improper storage!

The product may be damaged.

→ Storage instructions must be complied with.

5 Installation and Electrical Connection

5.1 Installation

- Protect the product from contamination during installation.
- Relevant electrical and mechanical regulations, standards, and safety rules must be observed.
- Protect the product from mechanical impact.
- Ensure that the sensor is mechanically secure.
- Torque values must be observed (see section Technical Data [▶ 7]).
- Insert the supplied spacer sleeves into the pockets provided on the side facing the mounting surface.
- Mount the sensor using M4 screws through the mounting hole.
- Do not exceed the maximum tightening torque of 0.5 Nm.

NOTICE

Risk of property damage in case of improper installation!

The product may be damaged!

→ Comply with installation instructions.

⚠ CAUTION

Risk of personal injury or property damage during installation!

Personal injury and damage to the product may occur.

→ Ensure a safe installation environment.

5.2 Adjustment

The following guidelines should be followed during sensor calibration to ensure the most stable object detection possible:

Highly glossy, reflective, and uneven objects



Care should be taken to ensure that no direct reflections fall on the receiving optics when dealing with highly reflective, shiny, or uneven surfaces, as they can impair object detection.

Steps, edges, and recesses




To ensure reliable detection, the light spot must be aligned directly with the object. If the light spot is large, ensure the object is of sufficient size.

Object movement



For moving objects, the movement should be at a right angle to the sensor's emitter/receiver axis to avoid direct reflections onto the receiver.

Background

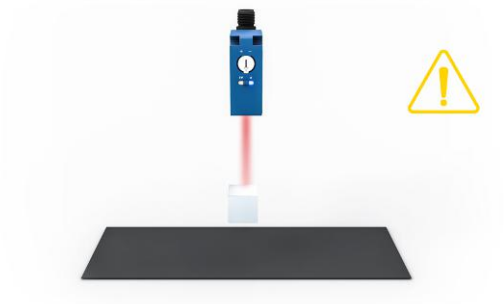

If possible, align reflex sensors with background suppression to a defined, static background. Ensure that the object is at a sufficient distance from the background in accordance with the sensor's switching hysteresis.

NOTICE

In the preset mode of operation (Standard Mode), it is recommended to limit the distance between the sensor and the background to a maximum of 15 m.

Otherwise, ambiguities in object detection are possible (for example, with highly reflective objects in the background).

If the background is at a distance greater than 15 m, it is recommended to use Interference-Free Mode.

5.3 Electrical Connection

- Wire the sensor in accordance with the connection diagram.
- Switch on the supply voltage (see section Technical Data [▶ 7])
- If using IO-Link, connect the sensor to 18...30 V DC.
- If not using IO-Link, connect the sensor to 10...30 V DC.


⚠ DANGER

Risk of personal injury or property damage due to electric current.

Voltage-conducting parts may cause personal injury or damage to equipment.

→ The electric device may be connected by appropriately qualified personnel only.

213

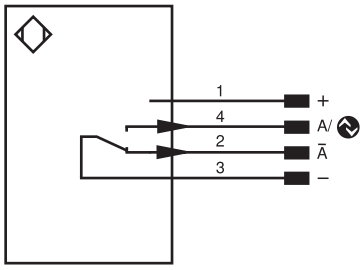


Legend					
+	Supply Voltage +	PT	Platinum measuring resistor	$EN_{A\,RS422}$	Encoder A/Ā (TTL)
–	Supply Voltage 0 V	nc	Not connected	$EN_{B\,RS422}$	Encoder B/B̄ (TTL)
~	Supply Voltage (AC Voltage)	U	Test Input	EN_A	Encoder A
A	Switching Output (NO)	Ū	Test Input inverted	EN_B	Encoder B
Ā	Switching Output (NC)	W	Trigger Input	A_{MIN}	Digital output MIN
V	Contamination/Error Output (NO)	W–	Ground for the Trigger Input	A_{MAX}	Digital output MAX
V̄	Contamination/Error Output (NC)	O	Analog Output	A_{OK}	Digital output OK
E	Input (analog or digital)	O–	Ground for the Analog Output	SY In	Synchronization In
T	Teach Input	BZ	Block Discharge	SY OUT	Synchronization OUT
R	Reset input	A_{MV}	Valve Output	O_{LT}	Brightness output
Z	Time Delay (activation)	a	Valve Control Output +	M	Maintenance
S	Shielding	b	Valve Control Output 0 V	rsv	Reserved
RxD	Interface Receive Path	SY	Synchronization	Wire Colors according to DIN IEC 60757	
TxD	Interface Send Path	SY–	Ground for the Synchronization	BK	Black
RDY	Ready	E+	Receiver-Line	BN	Brown
GND	Ground	S+	Emitter-Line	RD	Red
CL	Clock	⏚	Grounding	OG	Orange
E/A	Output/Input programmable	SnR	Switching Distance Reduction	YE	Yellow
	IO-Link	Rx+/–	Ethernet Receive Path	GN	Green
PoE	ower over Ethernet	Tx+/–	Ethernet Send Path	BU	Blue
IN	Safety Input	Bus	Interfaces-Bus A(+)/B(–)	VT	Violet
OSSD	Safety Output	La	Emitted Light disengageable	GY	Grey
Signal	Signal Output	Mag	Magnet activation	WH	White
BI_D+/–	Ethernet Gigabit bidirect. data line (A-D)	RES	Input confirmation	PK	Pink
$EN_{0\,RS422}$	Encoder 0-pulse 0/0̄ (TTL)	EDM	Contactor Monitoring	GNYE	Green/Yellow

5.4 Diagnosis

Display	Condition	Meaning
Power LED P		Sensor ready for operation
		No power supply available
		**Warning** The LED for switching status display A1 remains in function

Display	Condition	Meaning
		**Error** The LED for switching status display A1 is out of function
Switching status display A1		Switching output activ
		Switching output not active
Lokalisierung		Localization function active, A1 remains in function

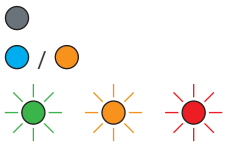

= Does not lights up

= Lights up permanentlyt

= Flashes

5.5 Troubleshooting

Error	Possible cause	Elimination
Warning	Warning signal	• Reduce distance between sensor and object • Adjust angle of sensor to object
	Undervoltage	• Increase voltage supply to min. 18 V DC
Error	Short circuit	• Check the electrical wiring and eliminate the short circuit
	Temperature error	• Disconnect the sensor from the supply voltage and allow it to cool • Mount the mounting bracket as a heat sink • Reduce load on outputs
	Device error	• Disconnect the sensor from the supply voltage and restart it • Replace the sensor



INFORMATION

Required action in case of fault:

1. Shut down the machine.
2. Analyze and eliminate the cause of error with the aid of the diagnostics information.
3. If the error cannot be eliminated, please contact wenglor's support department.
4. Do not operate in case of indeterminate malfunctioning.
5. The machine must be shut down if the error cannot be definitively explained or properly eliminated.



⚠ DANGER

Risk of personal injury or property damage in case of non-compliance!

The system's safety function is disabled. Personal injury and damage to equipment may occur.

→ Required action as specified in case of fault.

6 Settings

The sensor can be set via the control, IO-Link and wTeach2. The different setting options are outlined below.

6.1 Adjustment via Potentiometer

Object Detection Directly in Front of a Background or Substrate

- Adjust and securely mount the sensor so that the light spot strikes the object to be detected at a right angle.
- Turn the potentiometer to the right stop or max. switching distance setting.
- Remove the object and slowly turn the potentiometer back until the output is switched. The background or the undersurface is now suppressed.
- Put the object back under the spot and check to determine whether or not the sensor is activated again.

Detection of Objects Without Interfering Background

- Adjust and securely mount the sensor so that the light spot strikes the object to be detected at a right angle.
- Turn the potentiometer to left stop or min. switching distance setting.
- Turn up the potentiometer until activation occurs and, if required, turn it up a bit further for increased switching reliability.

6.2 Setting via IO-Link and wTeach2

The sensors can exchange parameters and process data via IO-Link. The parameters can be used to make many additional settings on the device. The process data transmit cyclical data and condition monitoring.

To this end, the sensor is connected to a suitable IO-Link master (see product detail page/complementary products). The interface protocol and the IODD can be found at www.wenglor.com in the download area for the respective product.

For information on installing and connecting the wTeach2 software and its structure, as well as information on the general functions, see the wTeach2 operating instructions. They can be found online in the download area at www.wenglor.com under order number DNNF005.

7 Maintenance Instructions



NOTICE

This wenglor product is maintenance-free.

Cleaning and inspection of the plug connections at regular intervals are advisable.

Do not clean the product with solvents or cleaning agents that could damage the product.

The product must be protected against contamination during initial start-up.

8 Proper Disposal

wenglor sensoric GmbH does not accept the return of unusable or irreparable products. Respectively valid national waste disposal regulations apply to product disposal.

9 Declarations of Conformity

Declarations of conformity can be found on our website at www.wenglor.com in the product's separate download area.