

U2GTxxx

Ultrasonic Distance Sensor



Operating Instructions

Index

- 1. General 4**
 - 1.1 Information Concerning these Instructions 4
 - 1.2 Explanations of Symbols 4
 - 1.3 Limitation of Liability 5
 - 1.4 Copyrights 5
- 2. For Your Safety..... 6**
 - 2.1 Use for Intended Purpose 6
 - 2.2 Use for Other than the Intended Purpose 7
 - 2.3 Personnel Qualifications 7
 - 2.4 Modification of Products 7
 - 2.5 General Safety Precautions 7
 - 2.6 Approvals and Protection Class 8
- 3. Technical Data 9**
 - 3.1 General Data 9
 - 3.2 Warm-Up Phase 10
 - 3.3 Mode-Dependent Data 11
 - 3.4 Sonic Cone Diagrams 12
 - 3.4.1 U2GT001/U2GT003 12
 - 3.4.2 U2GT002/U2GT004 13
 - 3.5 Housing Dimensions 14
 - 3.6 Complementary Products 14
 - 3.7 Layout 15
 - 3.8 Scope of Delivery 15
- 4. Transport and Storage..... 16**
 - 4.1 Transport 16
 - 4.2 Storage 16
- 5. Installation and Electrical Connection 17**
 - 5.1 Installation 17
 - 5.2 Electrical Connection 18
 - 5.3 Troubleshooting 19
- 6. Default Settings 20**
- 7. Settings and Functions Overview 21**
 - 7.1 Settings via IO-Link and wTeach2 21
 - 7.1.1 Foreground Teach-In 21
 - 7.1.2 Background Teach-In 22
 - 7.1.3 Window Teach-In 22
 - 7.1.4 Through-Beam Sensor Operating Mode 23
 - 7.1.5 Additional Functions and Settings 24
 - 7.2 Pin Functions 27
 - 7.2.1 Input Functions 28
 - 7.2.2 Output Functions 28
 - 7.3 Condition Monitoring Functions 29
 - 7.3.1 Status Message Function 29
 - 7.3.2 Error Output Functions 29
 - 7.3.3 Simulation Functions 30

7.4 Condition Monitoring/Process Data 31

 7.4.1 Process Data In 31

 7.4.2 Process Data Out..... 31

7.5 Events..... 32

8. wTeach2 Configuration Software32

9. Maintenance Instructions.....32

10. Proper Disposal.....32

11. Appendix.....33

 11.1 List of Abbreviations 33

 11.2 Change Index for Operating Instructions 33

 11.3 Declarations of Conformity 33

1. General

1.1 Information Concerning these Instructions

- These instructions apply to products designated U2GTxxx.
- These instructions make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- Local accident prevention regulations and national work safety regulations must be complied with as well.
- The product is subject to further technical development, and thus the information contained in these operating instructions may also be subject to change.



NOTE!
The operating instructions must be read carefully before using the product and must be kept on hand for later reference.

1.2 Explanations of Symbols

- Safety precautions and warnings are emphasized by means of symbols and signal words.
- Safe use of the product is only possible if these safety precautions and warnings are adhered to.

The safety precautions and warnings are laid out in accordance with the following principle:



SIGNAL WORD!
Type and source of danger!
Possible consequences in the event that the hazard is disregarded.

- Measures for averting the hazard.

The meanings of the signal words, as well as the scope of the associated hazards, are listed below:



DANGER!
This signal word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.



WARNING!
This signal word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.



CAUTION!
This signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



ATTENTION!
This signal word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.



NOTE!
A note draws attention to useful tips and suggestions, as well as information regarding efficient, error-free use.

1.3 Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art technology, as well as applicable standards and guidelines. Subject to change without notice.
- wenglor sensoric elektronische Geräte GmbH (hereinafter referred to as “wenglor”) excludes all liability in the event of:
 - Non-compliance with the instructions,
 - Use of the product for purposes other than those intended,
 - Use by untrained personnel,
 - Use of unapproved spare parts,
 - Unapproved modification of products.
- These operating instructions do not include any guarantees from wenglor with regard to the described procedures or specific product characteristics.
- wenglor assumes no liability for printing errors or other inaccuracies contained in these operating instructions unless wenglor was verifiably aware of such errors at the point in time at which the operating instructions were prepared.

1.4 Copyrights

- The contents of these instructions are protected by copyright law.
- All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.

2. For Your Safety

2.1 Use for Intended Purpose

This sensor is used to measure distances.

Ultrasonic sensors emit pulsed ultrasonic waves at a certain frequency using air as a transmitting medium. The sensors evaluate the transit time of the ultrasound reflected from the object. Parameters can be taught into the sensors shown here via an input or IO-Link. The output is switched when the preselected switching point is reached. With some variants, the measured values can be output as an analog value. In addition, the measured value can be read out via IO-Link 1.1. The sensors can be used in both reflex mode and through-beam mode.

This product can be used for distance measurement in the following industries:

- Special machinery manufacturing
- Heavy machinery manufacturing
- Logistics
- Automotive industry
- Food industry
- Packaging industry
- Pharmaceuticals industry
- Clothing industry
- Plastics industry
- Woodworking industry
- Consumer goods industry
- Paper industry
- Electronics industry
- Glass industry
- Steel industry
- Printing industry
- Aviation industry
- Construction industry
- Chemicals industry
- Agriculture industry
- Alternative energies
- Raw materials extraction

2.2 Use for Other than the Intended Purpose

- Not a safety component in accordance with 2006/42/EC (Machinery Directive).
- The product is not suitable for use in potentially explosive atmospheres.
- The product may be used only with accessories supplied or approved by wenglor, or in combination with approved products. A list of approved accessories and combination products can be found at www.wenglor.com on the product detail page.



DANGER!

Risk of personal injury or property damage in case of use for other than the intended purpose!

Use for other than the intended purpose may lead to hazardous situations.

- Instructions regarding use for intended purpose must be observed.
-

2.3 Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel who use the product must have (uninterrupted) access to the operating instructions.



DANGER!

Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!

Personal injury and damage to equipment may occur.

- Adequate training and qualification of personnel.
-

2.4 Modification of Products



DANGER!

Risk of personal injury or property damage if the product is modified.

Personal injury and damage to equipment may occur. Noncompliance may result in loss of the CE mark and voiding of the warranty.

- Modification of the product is impermissible.
-

2.5 General Safety Precautions



NOTE!

- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
 - In the event of possible changes, the current version of the operating instructions can be found at www.wenglor.com in the product's separate download area.
 - Read the operating instructions carefully before using the product.
 - Protect the sensor against contamination and mechanical influences.
-

2.6 Approvals and Protection Class




3. Technical Data

3.1 General Data

Technical Data	Order Number	U2GT001	U2GT002	U2GT003	U2GT004
Ultrasound Data					
Working range, reflex sensor		50...600 mm	150...1,300 mm	50...600 mm	50...1,300 mm
Working range, through-beam sensor		50...1,200 mm	150...2,600 mm	50...1,200 mm	150...2,600 mm
Setting range		50...600 mm	150...1,300 mm	50...600 mm	50...1,300 mm
Reproducibility		4 mm	8 mm	4 mm	8 mm
Linearity deviation		4 mm	8 mm	4 mm	8 mm
Resolution		1 mm			
Ultrasonic frequency		260 kHz	205 kHz	260 kHz	205 kHz
Aperture angle		< 13°			
Service life (ambient temp. = +25 C)		100,000 hours			
Switching hysteresis		2%			
Electrical Data					
Supply voltage		18...30 V DC			
Current consumption (supply voltage = 24 V)		< 35 mA			
Switching frequency, reflex sensor		10 Hz			
Switching frequency, through-beam sensor		10 Hz			
Response time, reflex sensor		50 ms			
Response time, through-beam sensor		50 ms			
Temperature range (during operation)		-30...60° C			
Number of analog outputs		-	-	1	1
Number of switching outputs		2	2	1	1
Switching output voltage drop		< 2.5 V			
Switching output switching current		100 mA			
Short-circuit protection		Yes			
Reverse polarity and overload-proof		Yes			
Interface		IO-Link V1.1			
Smart sensor profile		Yes			
Data storage		Yes			
Protection class		III			
Mechanical Data					
Setting method		External teach-in/IO-Link			
Housing material		Stainless steel 1.4404			
Degree of protection		IP68/IP69K			
Connection type		M12×1, 4/5-pin			
Technical Safety Data					
MTTFd (EN ISO 13849-1)		1,452.07 a		1,192.59 a	
Output Functions					
Output A1		PNP		PNP, Error output	
		NO		NO	
Output A2		PNP		4...20 mA	
		NO		-	

3.2 Warm-Up Phase

The warm-up phase lasts roughly 30 minutes. At the beginning of the warm-up phase, linearity deviation and reproducibility may deviate from the specified values. During the warm-up phase, the values improve in the form of an exponential function until the values in the technical data are reached. The switch-on drift during this time is shown in the following diagram.

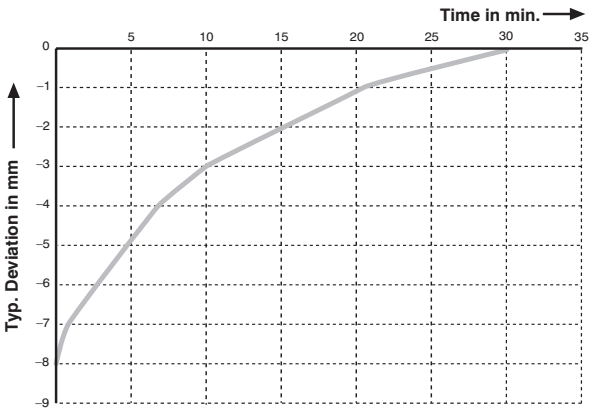

3.3 Mode-Dependent Data

Some technical data depend on the filter set. Depending on the setting, the following data are obtained:

Reflex and Through-beam Mode


Filter value	Switching frequency in Hz	Response time in ms
0	10.0	50
1	7.5	67
2	6.0	83
3	5.0	100
4	4.3	117
5	3.8	133
6	3.3	150
7	3.0	166
8	2.7	183
9	2.5	200
10	2.3	216
11	2.1	233
12	2.0	250
13	1.9	266
14	1.8	283
15	1.7	300
16*	1.6	316
17*	1.3	383
18*	1.1	450
19*	1.1	466
20*	1.1	466

* The specified switching frequency and response time correspond to the maximum duration including the interference filter. A detailed description of the filter function can be found in section [“7.1.5 Additional Functions and Settings” on page 24](#).


3.4 Sonic Cone Diagrams

3.4.1 U2GT001/U2GT003

Measurement of sonic cone on plate 100×100 mm

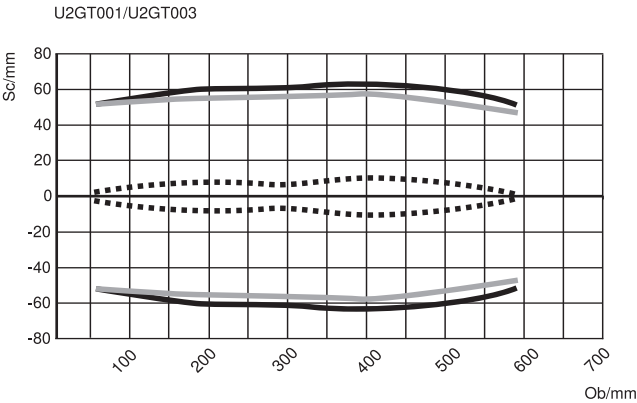

Measurement of the sonic cone on a rod with a diameter of 25 mm

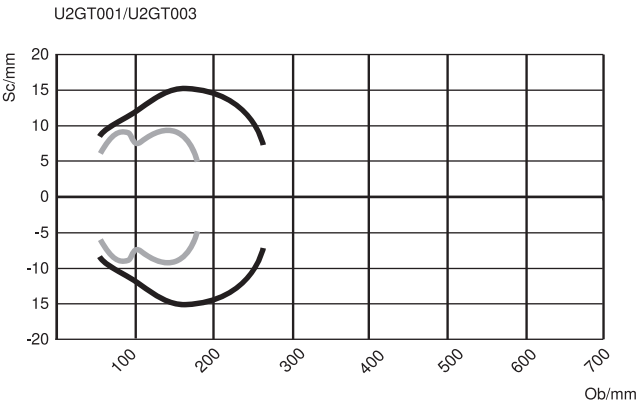


- Ob = Object
- Sc = Sonic cone width
- Standard sonic cone (center of the measured object)
 - Extra-narrow sonic cone (center of the measured object)
 - Standard sonic cone (front edge of the measured object)




NOTE!
Please note that using multiple ultrasonic sensors can cause reciprocal influence.

3.4.2 U2GT002/U2GT004

Measurement of sonic cone on plate 100×100 mm

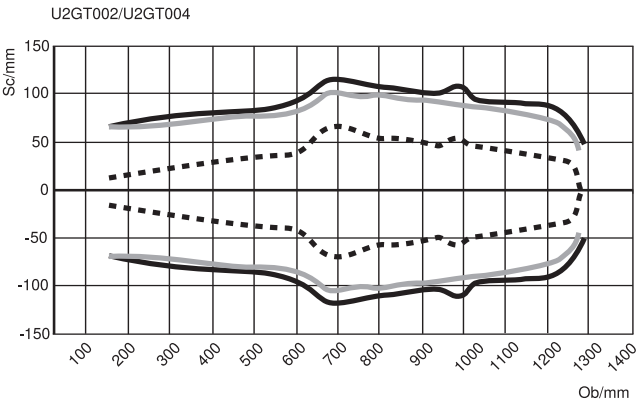


Measurement of the sonic cone on a rod with a diameter of 25 mm

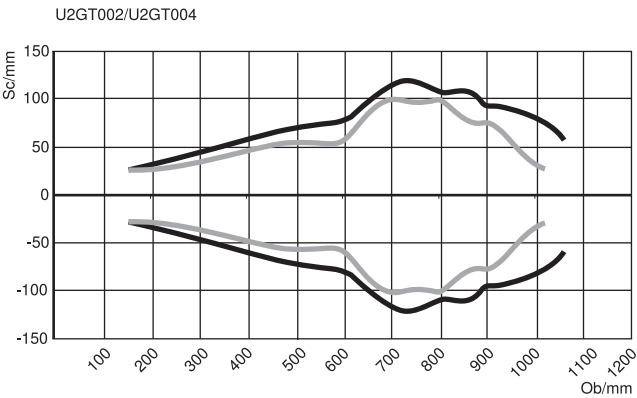

- Ob = Object
- Sc = Sonic cone width
- Standard sonic cone (center of the measured object)
 - Extra-narrow sonic cone (center of the measured object)
 - Standard sonic cone (front edge of the measured object)

3.5 Housing Dimensions

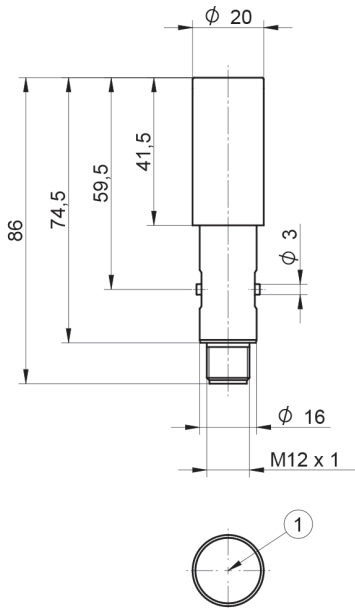


1 = Active surface
Dimensions specified in mm (1 mm = 0.03937")

3.6 Complementary Products

wenglor can provide you with suitable connection equipment for your product.

Suitable mounting technology no.	140	490	500
Suitable connection technology no.	02	35	
317	318		
U2GT001 and U2GT002	U2GT003 and U2GT004		
IO-Link Master			
wTeach2 software DNNF005			
Software for IO-Link Device Tool, DNNF019			

3.7 Layout

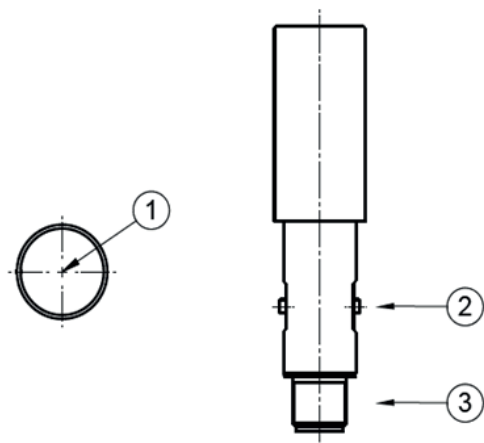

- 1 = Transducer
2 = Bayonet fastening
3 = Connector plug

3.8 Scope of Delivery

- Ultrasonic Reflex Sensor U2GT0xx
- Information sheet

4. Transport and Storage

4.1 Transport

Upon receipt of shipment, inspect the goods for damage in transit. In the case of damage, conditionally accept the package and notify the manufacturer of the damage. Then return the device, making reference to damage in transit.

4.2 Storage

The following points must be taken into consideration with regard to storage:

- Do not store the product outdoors.
- Store the product in a dry, dust-free place.
- Protect the product against mechanical impacts.
- Protect the product against exposure to direct sunlight.



ATTENTION!

Risk of property damage in case of improper storage!

The product may be damaged.

- Storage instructions must be complied with.
-

5. Installation and Electrical Connection

5.1 Installation

For mounting the sensor, the hygienic fastenings provided by wenglor must be used to prevent the transmission of vibrations into the environment. Make sure that the mounting clamps and consoles are positioned behind the seal. In contrast to photoelectric sensors, the U2GT sensor must not be clamped directly in the mounting fixture. The use of other mounting techniques may lead to malfunction of the sensor, for which wenglor sensoric elektronische Geräte GmbH accepts no liability. Furthermore, the following applies:

- Protect the product from contamination during installation.
- Observe all applicable electrical and mechanical regulations, standards and safety rules.
- Protect the product against mechanical influences.
- Make sure that the sensor is mounted in a mechanically secure fashion.
- If the object has smooth surfaces, the angle between the axis of the sound waves and the surface of the object should be $90^\circ \pm 3^\circ$. The angle can be considerably larger in the case of rough object surfaces.
- The active surface of the sensor may not contact any other machine parts.



NOTE!

Observe the blind spot.

In the area between the sensor's active surface and the beginning of its working range, correct functioning of the sensor is not assured. No objects may be located in this area.



ATTENTION!

Risk of property damage in case of improper installation!

The product may be damaged.

- Installation instructions must be complied with.



CAUTION!

Risk of personal injury or property damage during installation!


Personal injury and damage to the product may occur.

- A safe installation environment must be assured.


5.2 Electrical Connection

- Wire the sensor in accordance with the connection diagram.
- Switch on the supply voltage (see “3. Technical Data” on page 9).

U2GT001 and U2GT002:

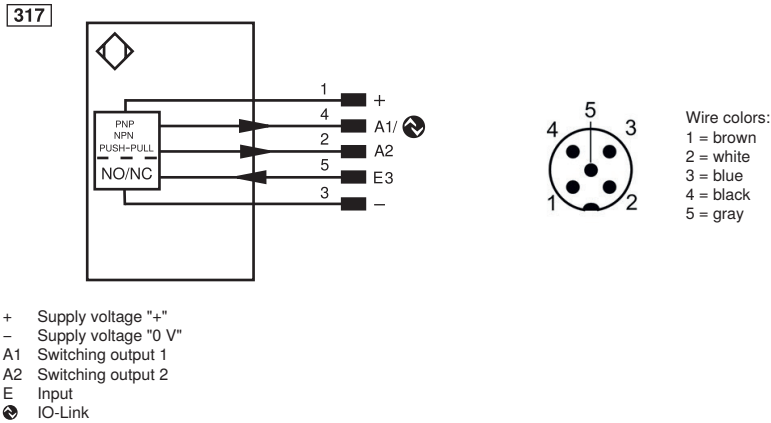

U2GT003 and U2GT004:

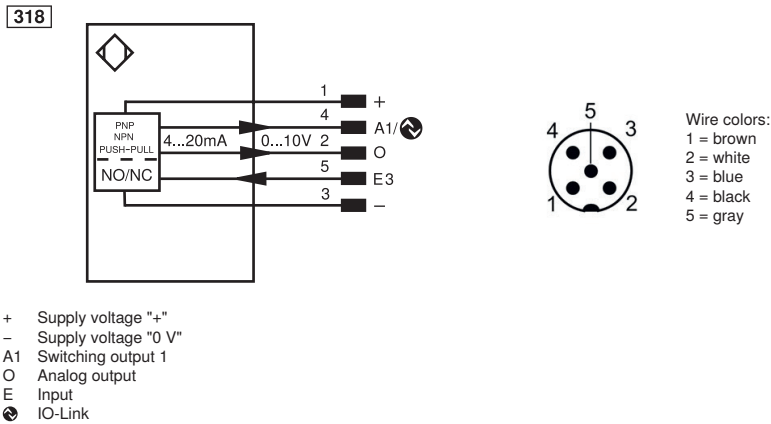

DANGER!
Risk of personal injury or property damage due to electric current.
Voltage-conducting parts may cause personal injury or damage to equipment.
• The electric device may be connected by appropriately qualified personnel only.

5.3 Troubleshooting

	Possible Cause	Elimination
Error	No signal	<ul style="list-style-type: none">• Adjust sensor object distance• Minimize environmental influences (air circulation, ultrasonic sources)• Check installation
	Object too close	<ul style="list-style-type: none">• Increase sensor object distance
	Object too far	<ul style="list-style-type: none">• Decrease sensor object distance
	Short circuit	<ul style="list-style-type: none">• Check the electrical wiring and eliminate the short circuit
	Undervoltage	<ul style="list-style-type: none">• Check the sensor's voltage supply
	Device error	<ul style="list-style-type: none">• Disconnect the sensor from the supply voltage and restart it
		<ul style="list-style-type: none">• Replace the sensor

Via IO-Link, it is possible to identify the respective causes precisely by means of condition monitoring.

NOTE!



- Shut down the machine.
- Analyze and eliminate the cause of error with the aid of the diagnostics information.
- If the error cannot be eliminated, please contact wenglor's support department.
- Do not operate in case of indeterminate malfunctioning.
- The machine must be shut down if the error cannot be definitively explained or properly eliminated.

DANGER!



Risk of personal injury or property damage in case of non-compliance!

- The system's safety function is disabled. Personal injury and damage to equipment may occur.
- Required action as specified in case of fault.

6. Default Settings

Technical Data	U2GT001	U2GT002	U2GT003	U2GT004
Temperature mode	Internal	Internal	Internal	Internal
A1 pin function	Switching output	Switching output	Error output	Error output
A1 teach-in mode	Foreground	Foreground	Foreground	Foreground
A1 PNP/NPN	PNP	PNP	PNP	PNP
A1 NO/NC	NO	NO	NO	NO
A1 switching point	600 mm	1,300 mm	600 mm	1,300 mm
A1 additional hysteresis	0	0	0	0
A2 pin function	Switching output	Switching output	Analog output (4...20 mA)	Analog output (4...20 mA)
A2 teach-in mode	Foreground	Foreground	Foreground	Foreground
A2 PNP/NPN	PNP	PNP	-	-
A2 NO/NC	NO	NO	-	-
A2 switching point	600 mm	1,300 mm	-	-
A2 additional hysteresis	0 mm	0 mm	-	-
A2 4 mA	-	-	50 mm	150
A2 20 mA	-	-	600 mm	1,300 mm
I3 function	Teach-in input	Teach-in input	Teach-in input	Teach-in input


7. Settings and Functions Overview

The sensor can be set via IO-Link and by means of wTeach2 or external teach-in. The following sections describe the different setting options.

7.1 Settings via IO-Link and wTeach2

The sensors can exchange parameters and process data via IO-Link. The parameters can be used to make many additional settings on the device. The process data transmit cyclical data and condition monitoring. To this end, the sensor is connected to a suitable IO-Link master (see product detail page/complementary products). The interface protocol and the IODD can be found at www.wenglor.com in the download area for the respective product.

7.1.1 Foreground Teach-In

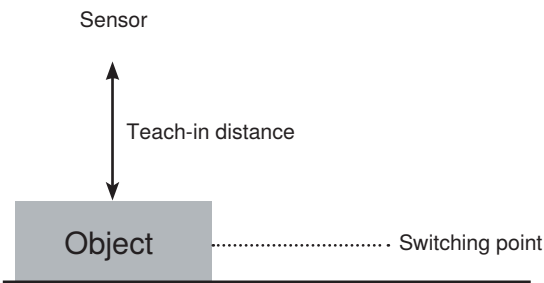


1. Install the sensor in accordance with the installation instructions.
2. Align the sensor with the foreground.
3. Configure or teach-in the switching output / the switching output function via IO-Link.
4. The sensor is switched as soon as an object is located between the foreground and the sensor.



NOTE!
If there's no object within the measuring range, switching distance is set to the end of the setting range.

7.1.2 Background Teach-In

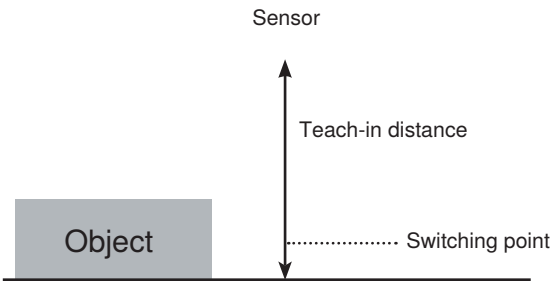


- 1. Install the sensor in accordance with the installation instructions.
- 2. Align the sensor to the background.
- 3. Configure or teach-in the switching output / the switching output function via IO-Link.
- 4. The sensor is switched as soon as an object is located between the background and the sensor.



NOTE!
If there's no object within the measuring range, switching distance is set to the end of the setting range.

7.1.3 Window Teach-In

In addition to foreground teach-in (default setting), there is also a window teach-in option for the switching output:

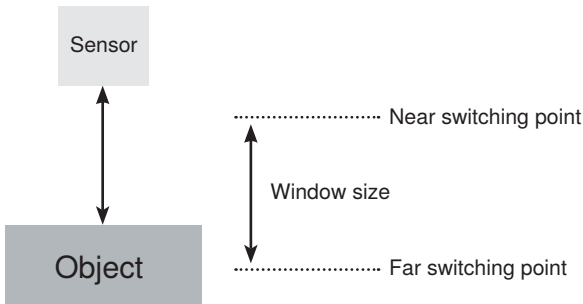

- 1. Enter or teach in the far switching point.
- 2. Enter or teach in the near switching point.
- 3. The sensor is switched when an object is located between the two switching points.



NOTE!
The far switching point must be greater than the near switching point.

7.1.4 Through-Beam Sensor Operating Mode

In addition to the reflex mode (default setting), a through-beam operating mode is also available. Two sensors are required to this end.

1. Set up one sensor as an emitter.
2. Set up another sensor as a receiver.
3. If the receiver is operated as a normally closed contact, it is switched when an object is located between the emitter and the receiver.



NOTE!

The sonic cone setting on the receiver determines the sensitivity of the through-beam sensor. The maximum range can be achieved with the standard sonic cone.



NOTE!

Sensors in reflex and through-beam mode must not be combined!

Differentiation between one and two layers of thin material such as paper or foil is possible in the through-beam operating mode.

1. Position the emitter and the receiver a short distance from each other.
2. Adjust the distance between the emitter and the receiver so that the receiver continues to switch for one layer but not for two.


7.1.5 Additional Functions and Settings


Filter

The selected filter has an influence on the response time (see response time in section [“3. Technical Data” on page 9](#)) and the number of distance values to be evaluated.

0

Filter	Description
0–15	Median filter Median filter from the specified number of measured values. If the signal is missing or invalid, an error is issued. This filter can provide additional smoothing of the signal in applications with objects with a homogeneous surface in a stable environment.
0	Median filter of 3 measured values
1	Median filter of 4 measured values
2	Median filter of 5 measured values
3	Median filter of 6 measured values
4	Median filter of 7 measured values
5	Median filter of 8 measured values
6	Median filter of 9 measured values
7	Median filter of 10 measured values
8	Median filter of 11 measured values
9	Median filter of 12 measured values
10	Median filter of 13 measured values
11	Median filter of 14 measured values
12	Median filter of 15 measured values
13	Median filter of 16 measured values
14	Median filter of 17 measured values
15	Median filter of 18 measured values
16–20	Median filter and interference filter Median filter from the specified number of measured values. The additional interference filter can be used to increase measurement reliability in the case of brief interferences in the measured section. Interferences such as waves, air vortexes, sound-absorbing areas or bulk material generate temporarily invalid signals that can lead to incorrect measurements. A higher filter level allows the interfering signals to be ignored for a defined period. If the distance changes continuously, the response time remains unchanged when the filter is activated.
16	Median filter of 19 measured values and bridging of 4 missing measured values (64 ms)
17	Median filter of 23 measured values and bridging of 7 missing measured values (112 ms)
18	Median filter of 27 measured values and bridging of 15 missing measured values (240 ms)

Filter	19	Median filter of 28 measured values and bridging of 31 missing measured values (496 ms)	0
	20	Median filter of 28 measured values and bridging of 62 missing measured values (992 ms)	
	<div></div> <div>NOTE! The technical data resulting from the various modes are specified in “3. Technical Data” on page 9.</div>		
Transmit signal	The transmit signal of the sensor can be switched off. This allows the sensor to be deactivated when not in use and, if necessary, interference can be avoided. On Transmit signal is on. Off Transmit signal is off. No measurements are taken. The switching behavior is identical to when no signal is received in reflective operation or as a through-beam sensor.		On
Sonic cone	This setting can be used to adjust the shape and range of the sonic cone. The diagrams for the individual sonic cones on standardized objects can be found in “3.4 Sonic Cone Diagrams” on page 12. Narrow cones can be used to block out constant interferences in the measured section (such as tank walls). Standard Narrow Extra narrow		Standard
Measured value unit (process data type)	The measured distance can be read out in millimeters or inches. Millimeter Read-out of distance values in mm for internal temperature compensation or external temperature compensation via the parameters Inch Read-out of distance values in 1/10 inch for internal temperature compensation or external temperature compensation via the parameters Millimeter (with external temperature) Output of distance values in mm and input of external temperature via Process Data Out Inches (with external temperature) Output of distance values in 1/10 inch and input of external temperature via Process Data Out		Millimeter

Temperature mode	<p>The sensor has internal temperature compensation. Alternatively, the temperature can be measured externally and sent to the sensor as a process or parameter.</p> <p>Internal Sensor operates with internal temperature compensation</p> <p>External Sensor works with external temperature compensation and uses the transmitted process or parameters (see section „7.4 Condition Monitoring/Process Data“). Whether process or parameter data is to be used is specified via the setting under Measured value unit > Process data type.</p>	Internal
External temperature	<p>Temperature values can be transmitted to the sensor at a resolution of 1 °C for temperature compensation. Parameter is used if the external temperature compensation is to work via the parameters.</p> <p>–30...+60 °C</p> <div style="display: flex; align-items: flex-start;"> <div style="margin-right: 10px;">  </div> <div> <p>NOTE! Regular updating of external temperature data is recommended, in order to prevent abrupt temperature changes and jumps in measurement results resulting therefrom. If no temperature value is transmitted when the sensor is started up in the external temperature mode, the standard value of 23 °C is used.</p> </div> </div>	23 °C

7.2 Pin Functions

For U2GT001 and U2GT002

Pin	Possible Settings	Default
A1	Switching Output Switching point SSC1 is assigned to the switching output. Error Output The error output switches if one of the assigned errors occurs; see table “Status Messages” on page 29 . Deactivated The pin is deactivated.	Switching output
A2	Switching Output Switching point SSC2 is assigned to the switching output. Antivalent Switching Output The switching output switches antivalently to switching output A1. Error Output The error output switches if one of the assigned errors occurs; see table “Status Messages” on page 29 . Deactivated The pin is deactivated.	Switching output
E	Transmit Signal Off Input The sensor's transmit signal is deactivated as long as the input is activated. The sensor does not send a measured value and sets the status to “No signal”. Teach-In Input The sensor can be taught in externally via pin 5. Deactivated The pin is deactivated.	Transmit signal off input

For U2GT003 and U2GT004

Pin	Possible Settings	Default
A1	Switching Output Switching point SSC1 is assigned to the switching output. Error Output The error output switches if one of the assigned errors occurs; see table “Status Messages” on page 29 . Deactivated The pin is deactivated.	Error output
O	Analog Output The analog output can be configured as a current or voltage output. The output is scalable and invertible.	Current output
E	Transmit Signal Off Input The sensor's transmit signal is deactivated as long as the input is activated. The sensor does not supply a measured value and sets the status to “No signal.” Teach-In Input The sensor can be taught in externally via pin 5. Deactivated The pin is deactivated.	Teach-In input

7.2.1 Input Functions

The analog and switching outputs can be set via pin 5 using external teach-in:

Function	Possible Settings	Default: Supply Voltage Active
External teach-in	Supply Voltage Active Function is triggered as soon as supply voltage is applied to the input. Supply Voltage Inactive Function is triggered as soon as 0 V is applied to the input or the input is opened.	Supply Voltage active

The time intervals required for this are:

- Activated for 2 sec. = Teach-in A1/4 mA/0 V
- Activated for 5 sec. = Teach-in A2/20 mA/10 V

7.2.2 Output Functions

The output functions are used to set the physical outputs.

Function	Possible Settings and Functions	Default
PNP/NPN/ push-pull	PNP NPN Push-pull	PNP
NC/ NO	Normally Open (NO) The output is high when the condition has been satisfied, depending on settings (switching point, warning, error). Normally Closed (NC) The output is low when the condition has been satisfied, depending on settings (switching point, warning, error).	NO
Current output, voltage output	Current output, scalable and invertible Voltage output, scalable and invertible	Current output
Additional hysteresis	0...200 mm/0...500 mm	0 mm

Error Output

The error output is switched in the following cases:

- Very small or poorly reflective (sound-absorbing) objects are located within the working range.
- Incorrect installation.
- The object is located outside of the working range.
- Strong air turbulence.
- Excessively strong ultrasound sources are located within the measuring range.

7.3 Condition Monitoring Functions

7.3.1 Status Message Function

The sensor provides various status messages. Due to the process data structure, four status messages can be transmitted as individual process data. These parameters can be used to set the status messages that are transmitted via the process data.

Function	Possible Settings	Default
Message 1	See table ““Status Messages” on page 29	Warning signal
Message 2	See table ““Status Messages” on page 29	Short circuit
Message 3	See table ““Status Messages” on page 29	Undervoltage
Message 4	See table ““Status Messages” on page 29	No signal

7.3.2 Error Output Functions

The status messages used to trigger the collective message can be defined for the warning output and the error output respectively. The status messages are OR-linked so that the output is activated when one of the defined status messages is activated.

Function	Possible Settings	Default
Error output	See table ““Status Messages” on page 29	No signal, object too close, object too wide, short circuit, device error

Status Messages

Warnings	
Warning signal	The object reflects too little sound (weak signal).
Undervoltage	The supply voltage is too low.
Emitter off	The emitter of the sensor is switched off.

Error	
No signal	The sensor is not receiving a signal. The error can occur, for example, due to: <ul style="list-style-type: none">• Strong air turbulence• Ultrasonic sources too strong in the measuring range• Very small or poorly reflective (sound-absorbing) objects are located within the working range• Incorrect installation
Object too close	The object is below the setting range or the set measuring range.
Object too far	The object is above the setting range or the set measuring range.
Short circuit	A short circuit has occurred on at least one pin.
Device error	A hardware error has occurred.

7.3.3 Simulation Functions

This function simulates the behavior of the sensor regardless of the current status and measured value. This can be used to check whether a plant in which the sensor is integrated reacts correctly to the data supplied by the sensor and processes them accordingly.

If a measured value is specified, the sensor behaves as if the specified measured value corresponds to the actual measured value. This means that the behavior of the outputs and status messages is simulated according to the specified measured value.

In addition, the individual outputs and status messages can be simulated separately from the measured value.

Function	Possible Settings	Default
Simulation mode	On Off	Off
Simulation measured value	Current measured value min...max. measuring range	Current measured value
Simulation SSC1	According to the measured value On Off	According to the measured value
Simulation SSC2	According to the measured value On Off	According to the measured value
Simulation status messages	Tests the individual status messages According to the measured value On Off	According to the measured value



NOTE!

- Output A1 is used for IO-Link communication in this function and cannot be simulated.
- Simulation mode ends automatically as soon as the power supply is interrupted.


7.4 Condition Monitoring/Process Data

The data described in the following section can be read or written cyclically via IO-Link/process data.

7.4.1 Process Data In

Data	Meaning
Measured value	Measured distance in mm or 1/10 inch As the sensor cannot determine a measured value in the following error cases, substitute values are read out: No signal: 0x7FFC / 32,764 mm Object too close: 0x8008 / – 32,760 mm Object too far: 0x7FF8 / 32,760 mm
Scale	Scaling of the measured value to the base length unit; –3 corresponds to mm.
SSC1	Switching point 1
SSC2	Switching point 2
Warning	Collective warning in the event of one of the warning status messages (see table ““Status Messages” on page 29)
Error	Collective warning in the event of one of the error status messages (see table ““Status Messages” on page 29)
Message 1	Status message 1 read out (see “7.3.1 Status Message Function”)
Message 2	Status message 2 read out (see “7.3.1 Status Message Function”)
Message 3	Status message 3 read out (see “7.3.1 Status Message Function”)
Message 4	Status message 4 read out (see “7.3.1 Status Message Function”)

7.4.2 Process Data Out

Data	Meaning
Transmission signal	Transmit signal on/off  NOTE! This parameter can be used to configure multiplex operation of the sensors. In the multiplex mode, ultrasonic sensors emit their pulses alternately. This mode of operation prevents sensors located in direct proximity to each other from interfering with one another.
Teach-In SSC1	Starts the teach-in process for SSC1
Teach-In SSC2	Starts the teach-in process for SSC2
External temperature value	Enter the external temperature in °C for temperature compensation

7.5 Events

Events are diagnostic information that is standardized by IO-Link and exchanged between the IO-Link master and the device. The following events are supported:

Name	Event Code	Type	Specification
Device error – unknown error	0x1000	Error	IO-Link
Short circuit – check installation	0x7710	Error	IO-Link
Supply voltage too low – check tolerances	0x5111	Warning	IO-Link

8. wTeach2 Configuration Software

For information on installing and connecting the software and its structure, as well as information on the general functions, see the wTeach operating instructions. They can be found online in the download area under order number DNNF005.

9. Maintenance Instructions

NOTE!



- This wenglor sensor is maintenance-free.
- Cleaning and inspection of the plug connections at regular intervals are advisable.
- Do not clean the sensor with solvents or cleaning agents that could damage the product.
- The product must be protected against contamination during initial start-up.

10. Proper Disposal

wenglor sensoric GmbH does not accept the return of unusable or irreparable products. Respectively valid national waste disposal regulations apply to product disposal.

11. Appendix

11.1 List of Abbreviations

Abbreviation	Meaning
Tu	Ambient temperature
Ub	Supply voltage
IODD	IO Device Description
MTTFd	Mean Time To Dangerous Failure

11.2 Change Index for Operating Instructions

Version	Date	Description/Changes
1.0.0	9/22/23	Initial version of the operating instructions
1.1.0	2/20/24	Update in section “3.4 Sonic Cone Diagrams” on page 12 and “5. Installation and Electrical Connection” on page 17
1.2.0	4/22/24	Update in section “3. Technical Data” on page 9

11.3 Declarations of Conformity

Declarations of conformity can be found on our website at www.wenglor.com in the product’s separate download area.