

Operating Instructions

FXSL004

Fill-level Sensor with IO-Link



EN



Table of Contents

1	General	3
1.1	Information Concerning these Instructions	3
1.2	Explanation of Symbols	3
1.3	Limitation of Liability	4
1.4	Copyrights	4
2	For Your Safety	5
2.1	Use for Intended Purpose	5
2.2	Use for Other than the Intended Purpose	5
2.3	Personnel Qualifications	5
2.4	Modification of Products	6
2.5	General Safety Precautions	6
2.6	Approvals and protection classes	6
3	Technical Data	7
3.1	General Data	7
3.2	Default Settings	8
3.3	Housing Dimensions	9
3.4	Complementary Products	9
3.5	Layout	9
4	Transport and Storage	10
4.1	Transport	10
4.2	Storage	10
5	Installation and Electrical Connection	11
5.1	Installation	11
5.2	Cleaning	13
5.3	Electrical Connection	13
6	Settings	14
6.1	Pin function	14
6.2	Window Trigger	14
6.3	Adaptive Trigger.....	15
7	Maintenance Instructions	16
8	Returns	17
9	Proper Disposal	18
10	Declarations of Conformity	19

1 General

1.1 Information Concerning these Instructions

- These instructions make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- Local accident prevention regulations and national work safety regulations must be complied with as well.
- The product is subject to further technical development, and thus the information contained in these operating instructions may also be subject to change. The current version can be found at www.wenglor.com in the product's separate download area.



INFORMATION

The operating instructions must be read carefully before using the product and must be kept on hand for later reference.

1.2 Explanation of Symbols

- Safety precautions and warnings are emphasized by means of symbols and signal words.
- Safe use of the product is only possible if these safety precautions and warnings are adhered to.

The safety precautions and warnings are laid out in accordance with the following principle:

SIGNAL WORD

Type and source of danger!

Possible consequences in the event that the hazard is disregarded.

→ Measures for averting the hazard.

The meanings of the signal words, as well as the scope of the associated hazards, are listed below:



DANGER

This signal word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.



WARNING

This signal word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.



CAUTION

This signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



NOTICE

This signal word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.



INFORMATION

Information draws attention to useful tips and suggestions, as well as information on efficient, error-free use.

1.3 Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art technology, as well as applicable standards and guidelines. Subject to change without notice.
- A valid declaration of conformity can be accessed at www.wenglor.com in the product's separate download area.
- wenglor sensoric elektronische Geräte GmbH (hereinafter referred to as "wenglor") excludes all liability in the event of:
 - Non-compliance with the instructions
 - Use of the product for purposes other than those intended.
 - Use by untrained personnel.
 - Use of unapproved spare parts.
 - Unapproved modification of products.
- These operating instructions do not include any guarantees from wenglor with regard to the described procedures or specific product characteristics.
- wenglor assumes no liability for printing errors or other inaccuracies contained in these operating instructions unless wenglor was verifiably aware of such errors at the point in time at which the operating instructions were prepared.

1.4 Copyrights

- The contents of these instructions are protected by copyright law.
- All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.

2 For Your Safety

2.1 Use for Intended Purpose

This sensor is used to monitor fill levels and for the detection of media.

The LevelTech works in accordance with the frequency sweep principal:

Together with its environment, an electrode integrated into the tip of the sensor functions as a capacitor. The medium determines the capacitance value depending on its dielectric constant.

A resonant circuit is created in combination with a coil in the sensor's electronics. The switching signal is triggered depending on the measured resonant frequency and the programmable switching window. The sensor may only be used for detecting the fill levels of liquids and solids with a dielectric constant greater than 1.5. The sensor may only be used for media to which the housing material and the tip of the sensor are resistant.

This Product Can Be Used in the Following Industry Sectors:

- Special-purpose mechanical engineering
- Heavy mechanical engineering
- Logistics
- Automotive industry
- Food industry
- Packaging industry
- Pharmaceuticals industry
- Plastics industry
- Woodworking industry
- Consumer goods industry
- Paper industry
- Electronics industry
- Glass industry
- Steel industry
- Aviation industry
- Chemicals industry
- Alternative energies
- Raw materials extraction

2.2 Use for Other than the Intended Purpose

- Not a safety component in accordance with 2006/42/EC (Machinery Directive).
- The product is not suitable for use in potentially explosive atmospheres.
- The product may be used only with accessories supplied or approved by wenglor, or in combination with approved products. A list of approved accessories and combination products can be found at www.wenglor.com on the product detail page.



DANGER

Risk of personal injury or property damage in case of use for other than the intended purpose!

Use for other than the intended purpose may lead to hazardous situations.

→ Observe instructions regarding use for intended purpose.

2.3 Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel who use the product must have (permanent) access to the operating instructions.



DANGER

Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!

Personal injury and damage to equipment may occur.

→ Adequate training and qualification of personnel

2.4 Modification of Products



DANGER

Risk of personal injury or property damage if the product is modified!

Personal injury and damage to equipment may occur. Noncompliance may result in loss of the CE and/or UKCA mark and voiding of the warranty.

→ Modification of the product is not permitted

2.5 General Safety Precautions



INFORMATION

These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.




In the event of possible changes, the current version of the operating instructions can be found at www.wenglor.com in the product's separate download area.

Read the operating instructions carefully before using the product.

Protect the sensor against contamination and mechanical influences.

Installation and removal of the product are only permissible in pressure-free piping systems which have been allowed to cool down.

2.6 Approvals and protection classes

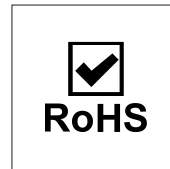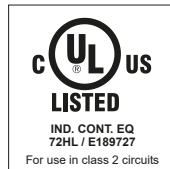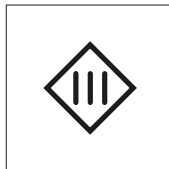

3 Technical Data

3.1 General Data

	FXSL004
Sensor-specific data	
Measuring principle	Frequency sweep
Measuring Range > DK***	1.5
Medium	Liquids, granulate, powder
Response Time	0.04 s
ambient conditions	
Media temperature TM (TU < 50 °C)	-40...115 °C**
Media temperature TM brief (TU < 50 °C, t < 1 h)	-40...130 °C
Ambient temperature	-40...85 °C
Storage temperature	-40...85 °C
Pressure Resistance	100 bar
Electrical data	
Supply Voltage	8...35 V DC
Current Consumption (U _b = 24 V)	< 53 mA
Number of Switching Outputs	2
Power-up Time	< 1.5 s
Switching Output/Switching Current	100 mA
Switching Output Voltage Drop	≤ 1.9 V
Signal source	Change of medium
Leakage Current	< 100 µA
Short Circuit Protection	yes
Reverse Polarity Protection	yes
Interface	IO-Link V1.1
Mechanical Data	
Setting Method	IO-Link
Housing Material	Stainless steel, V4A (1.4404/316L)
Material in contact with media	Stainless steel, V4A (1.4404 / 316L) Plastic, PEEK
Degree of Protection	IP67 IP69K
Connection	M12 × 1; 4-pin
Connector Plug Material	Stainless Steel
Process Connection	G 1/2"
Safety technology data	
MTTFd (EN ISO 13849-1)	633.2 a
Function	
Attenuation (adjustable)	
Selective fill-level measurement	
General data	
Scope of delivery	1 × initial start-up instructions 1 × sensor
Output functions	
Output	Push-pull
Circuit	

FXSL004	
Adjustable parameters	
Output	Push-pull NPN PNP
Circuit	NC NC/NO NO
Other parameters	Adaptive trigger Window trigger

* mounted in closed metal tank

** TM= temperature of medium; TU= ambient temperature

*** The relative dielectric constant of the medium to be detected must be greater than 1.5. (DC = dielectric constant)




INFORMATION

When using pin 2 as an analog output, the ambient temperature may only be within -40...65 °C.

3.2 Default Settings

Pin 4	Output	Switching output
	Output function	Push-pull NO
	Polarity	Push-pull
	Working mode	Window trigger
	Switching window min	0%
	Switching window max	75%
	Hysteresis	3%
	Attenuation	0.1 s
Pin 2	Output	Switching output
	Output function	Push-pull NC
	Polarity	Push-pull
	Working mode	Window trigger
	Switching window min	75%
	Switching window max	100%
	Hysteresis	3%
	Attenuation	0.1 s

3.3 Housing Dimensions

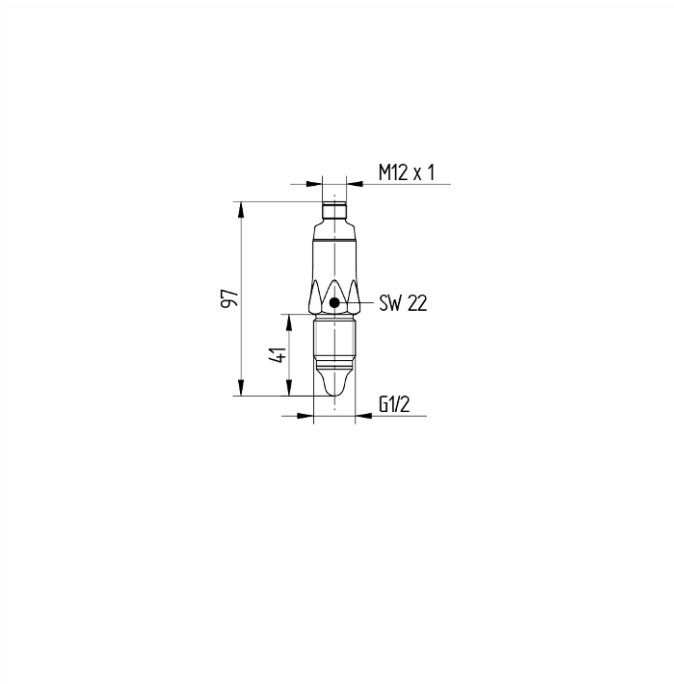


Dimensions in mm (1 mm = 0.03937 inch)

3.4 Complementary Products

wenglor offers you the right connection and mounting technology as well as other accessories for your product. You can find this at www.wenglor.com on the product details page at the bottom.

3.5 Layout

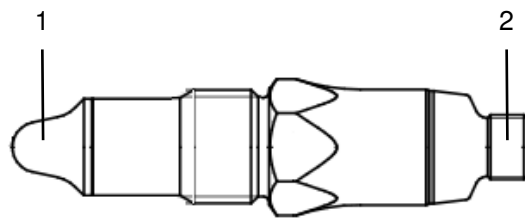

1 = Sensor tip

2 = Connection with M12 plug

4 Transport and Storage

4.1 Transport

Upon receipt of shipment, the goods must be inspected for damage in transit. In the case of damage, conditionally accept the package and notify the manufacturer of the damage. Then return the device, making reference to damage in transit.

4.2 Storage

The following points must be taken into consideration with regard to storage:

- Do not store the product outdoors.
- Store the product in a dry, dust-free place.
- Protect the product against mechanical impacts.
- Protect the product against exposure to direct sunlight.



NOTICE

Risk of property damage in case of improper storage!


The product may be damaged.

→ Storage instructions must be complied with.

5 Installation and Electrical Connection

5.1 Installation

- Protect the product from contamination during installation.
- Observe all applicable electrical and mechanical regulations, standards and safety rules.
- Protect the product against mechanical influences.
- Make sure that the sensor is mounted in a mechanically secure fashion.
- Specified torque values must be observed.

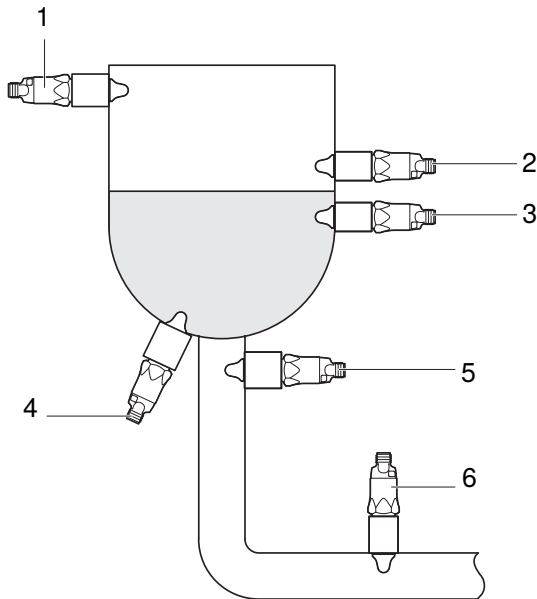

1	Overflow protection	2	Limit level max.
3	Limit level min.	4	Dry-running protection
5	Dry-running protection	6	Dry-running protection

The sensor can be mounted in any position on the vessel. A sensor (1) mounted on the top of the vessel protects against overflowing. Sensors located further down detect a maximum (2) or minimum (3) level. A sensor (4,5,6) mounted at the bottom or on the outlet pipe can protect a connected pump from running dry.



NOTICE

The sensor can be mounted in any position on the vessel. However, the following mounting instructions must be observed for hygienically correct positioning of the sensor.



INFORMATION

The LevelTech sensor should only be installed on closed metal containers in order to comply with the EMC directive DIN EN 61326.



NOTICE

Risk of property damage in case of improper installation!

The product may be damaged!

- Comply with installation instructions.



CAUTION

Risk of personal injury or property damage during installation!

Personal injury and damage to the product may occur.

→ Ensure a safe installation environment.




INFORMATION

The LevelTech sensor can be mounted and sealed in 2 different ways (depending on the process connection):


- Sealing via PTFE tape
- Sealing via PEEK to metal

1. sealing with PTFE tape

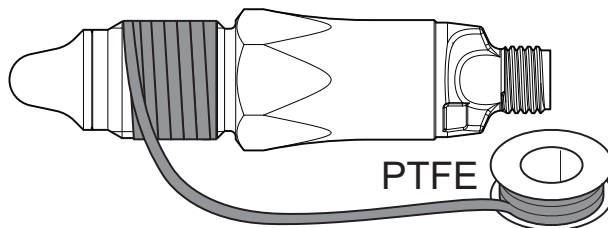

- Containers and pipes are free of media.
- Seal the thread on the sensor with Teflon tape (PTFE).
- Screw in the sensor.
- Tightening torque G1/2": 30 Nm max.
- Tightening torque G1/2" NPT: 20 Nm max.
- Pressure load up to 100 bar

2. sealing by means of PEEK on metal

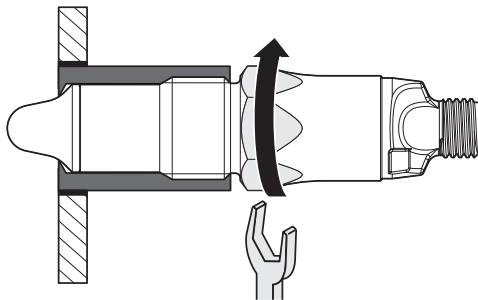

- Tanks and pipes are free of media.
- The adapter or the weld-in sleeve must be installed free of dead space and in a completely drainable position.
- Screw in the sensor.
- Tightening torque: 15...20 Nm
- Pressure load up to 10 bar



INFORMATION

When mounting with PEEK on a metal seal, only original wenglor accessories should be used. The corresponding parts can be found at www.wenglor.com under Mounting technology on the product detail page. Accessories for this type of installation are marked accordingly.

5.2 Cleaning

When cleaning the exterior, observe the permissible ambient temperature and degree of protection. When selecting a cleaning agent, the resistance of the materials must be taken into account. A compatibility list is available for download at www.wenglor.com.

5.3 Electrical Connection

- Wire the sensor according to the connection diagram.
- Switch on the supply voltage (see section Technical Data [► 7]).
- Connect the sensor to 8...36 V DC.
- When operated with IO-Link:
 - An IO-Link master with class A port must be used because pin 5 is not connected in the case of a class A port.
 - In the case of excessive interference, a shielded cable should be used.




DANGER

Risk of personal injury or property damage due to electric current.

Live parts may cause damage to persons and equipment.

→ The electrical device may only be connected by qualified personnel.

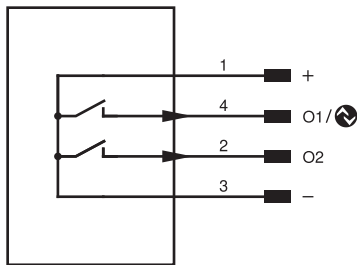

pin	Pin function	Polarity	Circuit
1	Supply voltage +		
2	switching output	push-pull	NO
3	Supply voltage 0 V		
4	switching output	push-pull	NO

6 Settings

The sensor can be configured using either wTeach2 or IO-Link.

If foam formation or buildup of media needs to be detected, configuration via wTeach2 is recommended.

For configuration via IO-Link and wTeach2, the sensor is connected to a suitable IO-Link master (see product detail page/Complementary Products). The interface protocol and the IO-Link can be found at www.wenglor.com in the download section for the respective product.

For installation, connection, and setup of the wTeach2 software as well as general functions, see the wTeach2 operating instructions. These are available online at www.wenglor.com in the download section under order number DNNF005.

6.1 Pin function

The following describes the main pin functions.

pin	Possible settings	Default
O1	<p>switching output</p> <p>For setting options, see Window Trigger [▶ 14] and Adaptive Trigger [▶ 15].</p> <p>Disabled</p>	switching output
O2	<p>switching output</p> <p>For configuration options, see Window Trigger [▶ 14] and Adaptive Trigger [▶ 15].</p> <p>current output</p> <p>Scalable and invertible</p> <p>Disabled</p>	Switching output

6.2 Window Trigger

The window trigger is used to define the respective switching windows for each switching output. If the input signal falls within the limit values, the switching output is triggered. This allows different media to be distinguished from one another, e.g., oil versus water or beer versus foam.

The window trigger is enabled by default. The following settings and default values apply:

Parameter	Possible Settings	Default settings
Lower limit of the switching window	0...100%	O1: 0% O2: 75%
Upper limit of the switching window	0...100 %	O1: 75% O2: 100%
hysteresis	0...50 %	3%
Damping (rise time/fall time delay)	0...10 s	0.1 s
Polarity	NPN / PNP / push-pull / Inactive	push-pull
Circuit	<p>Normally Open (NO)</p> <p>The output is high when the condition is met, depending on the setting.</p> <p>Normally closed (NC)</p> <p>The output is low if the condition is met, depending on the setting.</p>	O1: NO O2: NC

6.3 Adaptive Trigger

The adaptive trigger is a plug-and-play solution for applications involving frequent changes in the medium. Normally, no additional sensor configuration is required to use the adaptive trigger, as the sensor automatically adjusts to the new medium and triggers the output signal.

To avoid existing interference, e.g., due to buildup, the empty state of the tank can be taught if necessary. Furthermore, additional measurement stabilization can be activated so that the switching output only switches when the input signal has been stable for at least 1 second.

The following conditions must be met for the use of the adaptive trigger:

- The input signal must be as stable as possible
- To receive a switching signal, the new measured value must differ from the old measured value by at least 3%.
- The sensor must be in air during the ramp-up phase in the medium of air



NOTICE

If a medium is being measured whose DC value is lower than that of the previously measured medium, the sensor tip must be cleaned.

The window trigger is enabled by default. When switching to the adaptive trigger, the following setting options and default settings apply:

Parameter	Possible settings	Default settings
Threshold 1	0...100 % Below the threshold value, the adaptive trigger is always active. Deactivation occurs only once the threshold value and the trigger distance are exceeded.	0
Threshold 2	0...100 % Above the threshold value, the adaptive trigger is inactive. Switching occurs as soon as the input signal falls below the threshold value and the trigger distance is exceeded.	100%
Damping (Rise/fall time delay)	0...10 s Rise/fall time delay	0.1 s
Trigger distance	3...50 % Setting the sensor sensitivity. This defines by how many percent the new measured value must deviate from the previous measured value for the sensor to switch.	3%
Start level	0...100% The start level defines whether the switching output should be activated when the power supply is connected. If the measurement level is below the start level when the sensor is connected, the switching output is activated.	0
Stabilization function	On / Off / Inactive If the stabilization function is enabled, the input signal must be stable for at least one second for the switching output to activate.	Off
Polarity	NPN / PNP / push-pull / Inactive	push-pull
Circuit	Normally Open (NO) The output is high when the condition is met, depending on the setting. Normally closed (NC) The output is low if the condition is met, depending on the setting.	O1: NO O2: NC

7 Maintenance Instructions



NOTICE

This wenglor product is maintenance-free.

Cleaning and inspection of the plug connections at regular intervals are advisable.

Do not clean the product with solvents or cleaning agents that could damage the product.

The product must be protected against contamination during initial start-up.

Contamination which adheres to the measuring probe distorts the measured value for flow rate.

8 Returns

Due to legal regulations and for the protection of employees, wenglor sensoric GmbH requires a signed declaration of decontamination before your order can be processed.

The corresponding form is available at www.wenglor.com → Download → General Terms and Conditions and Returns.

9 Proper Disposal

wenglor sensoric GmbH does not accept the return of unusable or irreparable products. Respectively valid national waste disposal regulations apply to product disposal.

10 **Declarations of Conformity**

Declarations of conformity can be found on our website at www.wenglor.com in the product's separate download area.